


## EVF COLOR ADJUSTMENT

Adjust the color of the display in the electronic viewfinder.

- 1 Adjust colors using the focus stick (focus lever).

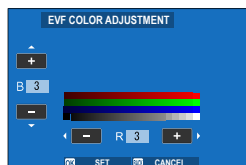

- 2 Press **MENU/OK**.

## LCD BRIGHTNESS

Adjust monitor brightness.

Options											
-5	-4	-3	-2	-1	0	+1	+2	+3	+4	+5	

## LCD COLOR

Adjust monitor hue.

Options											
-5	-4	-3	-2	-1	0	+1	+2	+3	+4	+5	

## LCD COLOR ADJUSTMENT

Adjust the color of the display in the LCD monitor.

- 1 Adjust colors using the focus stick (focus lever).
- 2 Press **MENU/OK**.