




Continuous Shooting (Burst Mode)

Capture motion in a series of pictures.

- 1 Rotate the drive dial to select **CH** (high-speed burst) or **CL** (low-speed burst).

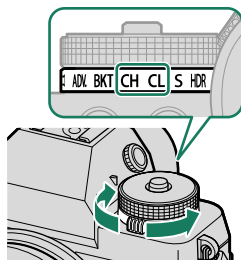

- 2 Navigate to **DRIVE SETTING** in the  **SHOOTING SETTING** menu and choose a frame advance rate.

 This feature can also be accessed via shortcuts (📖 312).

- 3 Press and hold the shutter button; the camera will continue to take photos while the shutter button is pressed.

 Shooting ends when the shutter button is released or the memory card is full.