


SOUND SETTING



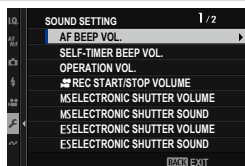

Make changes to camera sounds.

To access sound settings, press **MENU/OK**, select the **2 (SET UP)** tab, and choose **SOUND SET-UP**.







AF BEEP VOL.

Choose the volume of the beep that sounds when the camera focuses. The beep can be muted by selecting **OFF**.

| Options | | | |
|--|--|---|--|
|  (high) |  (medium) |  (low) |  OFF (mute) |




SELF-TIMER BEEP VOL.

Choose the volume of the beep that sounds while the self-timer is active. The beep can be muted by selecting **OFF**.

| Options | | | |
|--|--|---|--|
|  (high) |  (medium) |  (low) |  OFF (mute) |

OPERATION VOL.

Adjust the volume of the sounds produced when camera controls are operated. Choose **OFF** to disable control sounds.

| Options | | | |
|--|--|---|--|
|  (high) |  (medium) |  (low) |  OFF (mute) |