



## Mode S: Shutter-Priority AE

Choose a shutter speed and let the camera adjust aperture for optimal exposure.


- 1 Rotate the **STILL/MOVIE** mode dial to **STILL**.

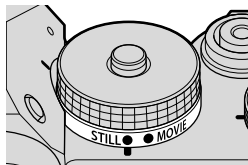

- 2 Slide the lens aperture mode switch to **A**.

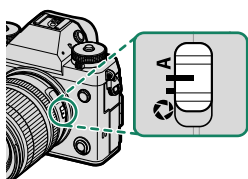

- 3 Rotate the shutter speed dial to select a shutter speed.

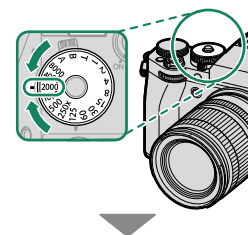

S will appear in the display.

