


MOVIE MODE

Before shooting movies, choose the frame rate and the frame size and aspect ratio.

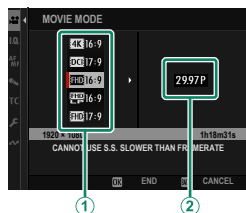

- 1 In the shooting menu, select **MOVIE SETTING**, then highlight **MOVIE MODE** and press **MENU/OK**.
- 2 Press the focus stick (focus lever) up or down to highlight the desired frame size and aspect ratio ((1)) and press the stick right.
 - Choose **3:2** for 6.2 K movies with an aspect ratio of 3:2.
 - Choose **16:9** or **17:9** for 4K movies with aspect ratios of 16 or 17 to 9.
 - Choose **16:9** or **17:9** for Full HD movies with aspect ratios of 16 or 17 to 9. **16:9** and **17:9** permit longer movies than do **16:9** and **17:9**.
- 3 Highlight a frame rate ((2)) and press **MENU/OK**.

Options					
23.98P	24P	25P	29.97P	50P	59.94P

The choice of frame rates varies with the movie mode.