


- 4 Focus on the farthest end of the subject and press **DISP/BACK**.

The selected focus distance (**B**) and focus range (**A** to **B**) appear on the focus distance indicator.

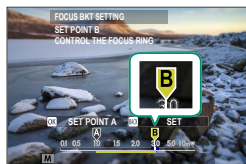

Instead of pressing the **DISP/BACK** button, you can press **MENU/OK** and select **A** again.

- 5 Take photographs.

The camera will calculate values for **FRAMES** and **STEP** automatically. The number of frames will appear in the display.

