


## Vertical Battery Grips

The VG-GFX100II vertical battery grip can be used to supplement the camera battery or when holding the camera rotated to take pictures in portrait ("tall") orientation.

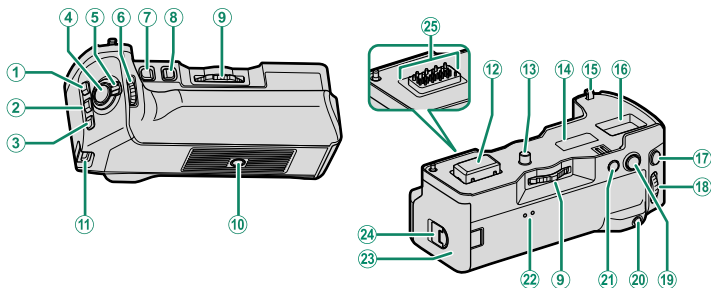

- ① **Fn1** button
- ② **Fn2** button
- ③ **Fn3** button
- ④ Shutter button
- ⑤ Control lock
- ⑥ Front command dial
- ⑦ **Fn5** button
- ⑧ **Fn6** button
- ⑨ Lock screw knob
- ⑩ Tripod socket
- ⑪ Eyelet for camera strap
- ⑫ Connector cover
- ⑬ Lock screw

- ⑭ Serial number plate
- ⑮ Hanging hook
- ⑯ Compartment for connector cover supplied with camera
- ⑰ **AFON** button
- ⑱ Rear command dial
- ⑲ Focus stick (focus lever)
- ⑳ **Q** (quick menu) button
- ㉑ **AEL** (exposure lock) button
- ㉒ Indicator lamps
- ㉓ Battery tray
- ㉔ Battery-chamber cover latch
- ㉕ Connector



All controls perform the same function as the matching controls on the camera.