




Recording Movies

Record movies with sound.

Recording Movies


Movies can be recorded by pressing the  (movie recording) button or rotating the mode dial to  (movie) or **Vlog**.


The (Movie Recording) Button


Use the  (movie recording) button to quickly and easily record movies while in still photography mode.

 The camera automatically selects **CONTINUOUS AF** for focus mode.

1 Press to start recording.

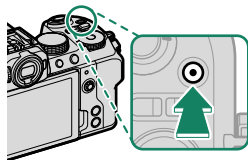

- A recording indicator () is displayed while recording is in progress.
- The borders of the display turn red during movie recording, green during high-speed recording.
- The time remaining is shown by a countdown display, while another display counts up to show the recording time.

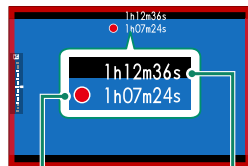

Recording time

Time remaining

2 Press again to end recording.

Recording ends automatically when the maximum length is reached or the memory card is full.