






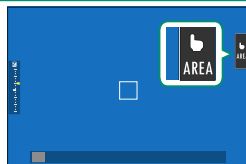

LCD Monitor

The operation performed can be selected by tapping the touch screen mode indicator in the display. Touch controls can be used for the following operations:



| Mode | Description |
|---|---|
|  TOUCH SHOOTING | Tap your subject in the display to focus and release the shutter. In burst mode, pictures will be taken while you keep your finger on the display. |
|  AF   AF OFF | <ul style="list-style-type: none"> In focus mode S (AF-S), the camera focuses when you tap your subject in the display. Focus locks at the current distance until you tap the AF OFF icon. In focus mode C (AF-C), the camera initiates focus when you tap your subject display. The camera will continue to adjust focus for changes in the distance to the subject until you tap the AF OFF icon. In manual focus mode (MF), you can tap the display to focus on the selected subject using autofocus. |
|  AREA | Tap to select a point for focus or zoom. The focus frame will move to the selected point. |
|  OFF | Touch controls disabled. |

⚠ Different touch controls are used during focus zoom (📖 136).

- 🔧 To disable touch controls and hide the touch screen mode indicator, select **OFF** for **🔧 BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > 📷 TOUCH SCREEN SETTING**.
- Touch control settings can be adjusted using **📷 AF/MF SETTING > TOUCH SCREEN MODE**. For information on the touch controls available during movie recording, see “Movie Recording (**TOUCH SCREEN MODE**; 📖 135)”.