



Flash Settings


- 1 Connect the unit to the camera.
- 2 In shooting mode, select **FLASH FUNCTION SETTING** in the **⚡ (FLASH SETTING)** menu tab. The options available vary with the flash unit.

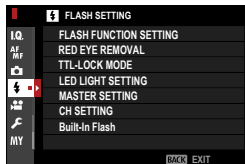

Menu	Description	
BUILT-IN FLASH	Displayed when ON is selected for ⚡ FLASH SETTING > Built-In Flash .	99
SYNC TERMINAL	Displayed when no compatible flash unit is connected or if the connected unit uses only the X-contact on the hot shoe.	262
SHOE MOUNT FLASH	Displayed when an optional flash unit is mounted on the hot shoe and turned on.	263
MASTER (OPTICAL)	Displayed if an optional flash unit functioning as a master flash for Fujifilm optical wireless remote flash control is connected and turned on.	266

 **SYNC TERMINAL** will be displayed if **OFF** is selected for **⚡ FLASH SETTING > Built-In Flash** and no supported shoe-mounted flash is attached.

- 3 Highlight items using the focus stick (focus lever) and rotate the rear command dial to change the highlighted setting.

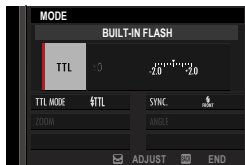

- 4 Press **DISP/BACK** to put the changes into effect.