



Mode S: Shutter-Priority AE

Choose a shutter speed and let the camera adjust aperture for optimal exposure.


- 1 Slide the **STILL/MOVIE** mode switch to **STILL**.

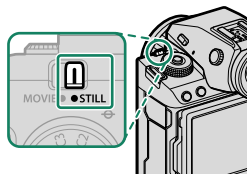

- 2 Rotate the mode dial to **S**.

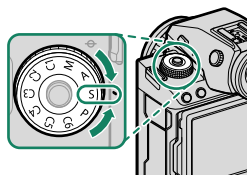

S will appear in the display.

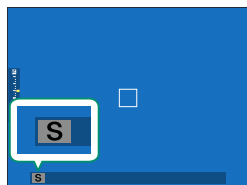

- 3 Rotate the rear command dial to choose the shutter speed.

