



Mode M: Manual Exposure

In manual mode, the user controls both shutter speed and aperture. Shots can be deliberately overexposed (brighter) or underexposed (darker), opening the door for a variety of individual creative expression. The amount the picture would be under- or over-exposed at current settings is shown by the exposure indicator; adjust shutter speed and aperture until the desired exposure is reached.

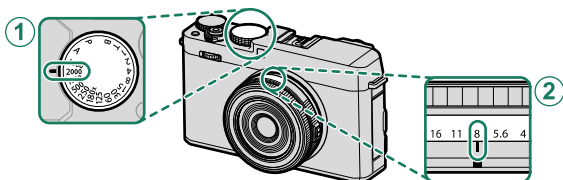

	Setting
① Shutter speed	User-selected
② Aperture	User-selected

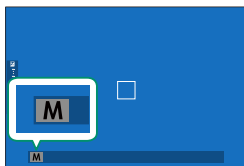

Confirm that **M** appears in the display.

- If the lens is equipped with an aperture ring, aperture can be adjusted by rotating the ring. If you are using a lens without an aperture ring, press the center of the front command dial to cycle to **APERTURE** and then rotate the dial to choose a value.
- When set to **S.S. (PROGRAM SHIFT)**, the front command dial can be rotated to adjust shutter speed in increments of $\frac{1}{3}$ EV.
- Front command dial settings can be adjusted using **FUNCTION/COMMAND DIAL SETTING > COMMAND DIAL SETTING** (67, 226).