



## TALLY LIGHT

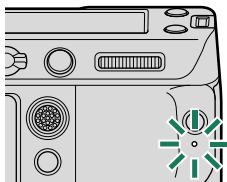

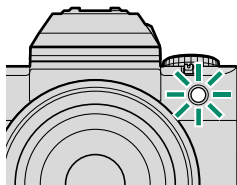





Choose the lamp (indicator or AF-assist) that lights during movie recording and whether the lamp blinks or remains steady.



*Indicator lamp*



*AF-assist illuminator*

| Option  | Description  |
|---|--|
| <b>FRONT OFF</b><br><b>REAR</b>    | The indicator lamp lights during movie recording.                    |
| <b>FRONT OFF</b><br><b>REAR</b>    | The indicator lamp blinks during movie recording.                    |
| <b>FRONT</b> <br><b>REAR</b>  | The indicator and AF-assist lamps light during movie recording.      |
| <b>FRONT</b> <br><b>REAR OFF</b>   | The AF-assist lamp lights during movie recording.                    |
| <b>FRONT</b> <br><b>REAR</b>  | The indicator and AF-assist lamps blink during movie recording.      |
| <b>FRONT</b> <br><b>REAR OFF</b>   | The AF-assist lamp blinks during movie recording.                    |
| <b>FRONT OFF</b><br><b>REAR OFF</b>   | The indicator and AF-assist lamps remain off during movie recording. |