

## Recording Movies

Record movies with sound.


### Recording Movies

Movies can be recorded by pressing the shutter button when the **STILL/MOVIE** mode dial is rotated to **MOVIE** or by pressing a function button to which **MOVIE RECORDING RELEASE** is assigned.

#### The **STILL/MOVIE** Mode Dial (**MOVIE**)

For access to a full range of camera settings when filming movies, rotate the **STILL/MOVIE** mode dial to **MOVIE** and record movies by pressing the shutter button.

- 1 Rotate the **STILL/MOVIE** mode dial to **MOVIE**.

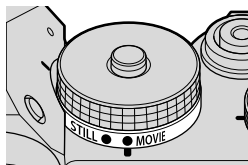

- 2 Slide the lens aperture mode switch to **A**.

