



## 6 Adjust IP ADDRESS SETTING.

- Select **AUTO** to use an IP address assigned by the network.
- Select **MANUAL** to choose the IP address manually as described in "Connecting Using an IP Address" (📖 265).

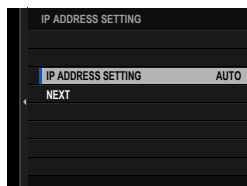

## 7 Select NEXT to proceed after adjusting IP address settings.

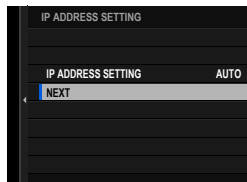

## 8 Name the communication setting profile.



## 9 Create a user name and password for use when connecting to the camera from a computer or tablet. Press MENU/OK.



## 10 Enter a user name.

