



Editing the Quick Menu


To choose the items displayed in the quick menu:

- 1 Press and hold the **Q** button during shooting.

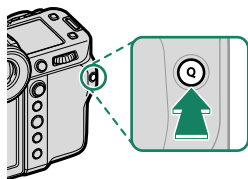

 The camera displays the photo quick menu during still photography and the movie quick menu when in movie mode.

- 2 The current quick menu will be displayed; use the focus stick (focus lever) to highlight the item you wish to change and press **MENU/OK**.
- 3 Highlight the item you wish to change and press **MENU/OK**. The following can be assigned to the quick menu.

 The quick menus can also be edited using **FUNCTION/DIAL SETTING > CAMERA EDIT/SAVE QUICK MENU** or **MOVIE EDIT/SAVE QUICK MENU**.