
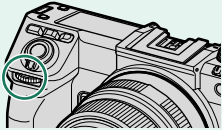


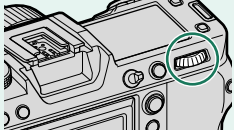


## The Command Dials

Rotate or press the command dials to:

	Front command dial	Rear command dial
		
  <b>Rotate</b>	<ul style="list-style-type: none"> <li>• Select menu tabs or page through menus</li> <li>• Adjust aperture<sup>1,2</sup></li> <li>• View other pictures during playback</li> </ul>	<ul style="list-style-type: none"> <li>• Highlight menu items</li> <li>• Choose the desired combination of shutter speed and aperture (program shift)</li> <li>• Choose a shutter speed<sup>1,4</sup></li> <li>• Adjust exposure compensation by rotating the dial while pressing the function button to which <b>EXPO. COMP.</b> is assigned<sup>1</sup></li> <li>• Adjust settings in the quick menu</li> <li>• Choose the size of the focus frame</li> <li>• Zoom in or out in full frame playback</li> <li>• Zoom in or out in multi-frame playback</li> </ul>
 <b>Press</b>	<ul style="list-style-type: none"> <li>• Switch between aperture and ISO sensitivity<sup>2</sup></li> <li>• Press and hold to choose the option selected for <b>FUNCTION/COMMAND DIAL SETTING &gt; COMMAND DIAL SETTING</b> in the <b>FUNCTION</b> (setup) menu</li> </ul>	<ul style="list-style-type: none"> <li>• Zoom in on the active focus point<sup>3</sup></li> <li>• Press and hold to choose the manual focus mode focus display<sup>3</sup></li> <li>• Zoom in on the active focus point during playback</li> </ul>

1 Can be changed using **FUNCTION/COMMAND DIAL SETTING > COMMAND DIAL SETTING**.

2 If the lens is equipped with an aperture ring with an "A" or "C" position, the aperture ring must be in the A or C position.

3 Available only if **FOCUS CHECK** is assigned to a function button.

4 Only if a value other than auto is selected for shutter speed.

 The rotation direction for the command dials can be selected using **FUNCTION/COMMAND DIAL SETTING > COMMAND DIAL DIRECTION**.