


- ❗ If the subject is outside the metering range of the camera, the shutter speed and aperture displays will show “— —”.
- To use the shutter speed dial, press the dial lock release and rotate the dial to the desired setting.
- If the lens is not equipped with an aperture ring, select **AUTO** for **⚙️ BUTTON/DIAL SETTING > APERTURE SETTING**.

Program Shift

If desired, you can rotate the rear command dial to select other combinations of shutter speed and aperture without altering exposure (program shift).

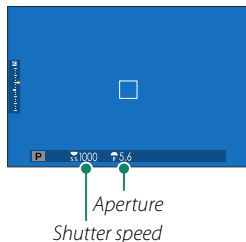

- ❗ Program shift is not available in any of the following circumstances:
 - When **TTL** is selected for **⚡ FLASH SETTING > FLASH FUNCTION SETTING**
 - When an auto option is selected for **📷 IMAGE QUALITY SETTING > DYNAMIC RANGE**
 - In movie mode

- 🔄 To cancel program shift, turn the camera off.