
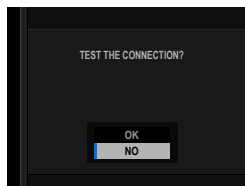



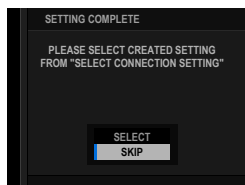
- 13** Select **OK** to test the connection. When a prompt is displayed stating that the test was successful, press **MENU/OK**.


 If the test ends in failure, check the communication setting profile and network settings.



- 14** Choose **SELECT** to finish creating the connection setting profile.

 The connection setting profile can also be selected later using **SELECT CONNECTION SETTING**.



- 15** Upload pictures to the FTP server ( 288).

Connecting via Wired LAN (Ethernet)

Connect to an FTP server via wired LAN (Ethernet).

- 1** Connect to the network by plugging an Ethernet cable into the camera's LAN connector.
- 2** Select **CREATE/EDIT CONNECTION SETTING > CREATE USING WIZARD** in the network/USB setting menu and choose **FTP TRANSFER**.
- 3** Select **CREATE NEW**.

 Choose **SELECT FROM LIST** to select from a list of existing connection setting profiles.

