


IMAGE QUALITY SETTING (Still Photography)

Adjust image quality settings for still photography.

To display image quality settings, press **MENU/OK** in the photo shooting display and select the **IQ** (IMAGE QUALITY SETTING) tab.

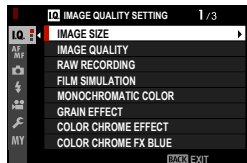

The options available vary with the shooting mode selected.

IMAGE SIZE

Choose the size and aspect ratio at which still pictures are recorded.

| Option | Image size |
|---------------|-------------|
| L 3:2 | 6240 × 4160 |
| L 16:9 | 6240 × 3512 |

| Option | Image size |
|--------------|-------------|
| L 1:1 | 4160 × 4160 |

| Option | Image size |
|---------------|-------------|
| M 3:2 | 4416 × 2944 |
| M 16:9 | 4416 × 2488 |

| Option | Image size |
|--------------|-------------|
| M 1:1 | 2944 × 2944 |

| Option | Image size |
|---------------|-------------|
| S 3:2 | 3120 × 2080 |
| S 16:9 | 3120 × 1760 |

| Option | Image size |
|--------------|-------------|
| S 1:1 | 2080 × 2080 |

The following options are available in **SPORTS FINDER MODE** (140) and when **1.25X CROP** is selected in burst mode:

| Option | Image size |
|---------------|-------------|
| M 3:2 | 4992 × 3328 |
| M 16:9 | 4992 × 2808 |

| Option | Image size |
|--------------|-------------|
| M 1:1 | 3328 × 3328 |

IMAGE SIZE is not reset when the camera is turned off or another shooting mode is selected.