



## Mode A: Aperture-Priority AE


Choose an aperture and let the camera adjust shutter speed for optimal exposure.


- 1 Rotate the **STILL/MOVIE** mode dial to **STILL**.

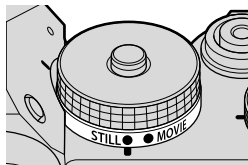


- 2 Rotate the shutter speed dial to **A**.

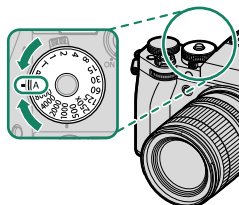

- 3 Slide the lens aperture mode switch to .

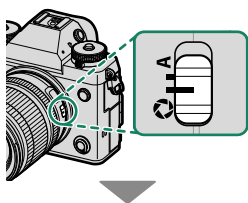

A will appear in the display.

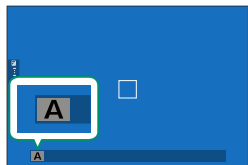

- 4 Rotate the lens aperture ring to choose an aperture.