



## AF/MF SETTING (Movie Recording)


Adjust focus settings for movies.

To display AF/MF settings, press **MENU/OK** in the movie shooting display and select the **AF MF** (AF/MF SETTING) tab.

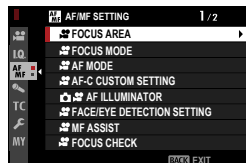




 The options available vary with the shooting mode selected.

### FOCUS AREA

Options are the same as those for still photography, but settings must be adjusted separately ( 73).

### FOCUS MODE

Choose the focus mode for movie recording.

Option	Description
 <b>MANUAL FOCUS</b>	Focus manually.
 <b>CONTINUOUS AF</b>	The camera focuses using AF-C.
 <b>SINGLE AF</b>	The camera focuses using AF-S.

### AF MODE

Choose how the camera selects the focus point for movie recording.

Option	Description
<b>MULTI</b>	The camera selects the focus area automatically.
<b>AREA</b>	The camera focuses on the subject in the selected focus area.