
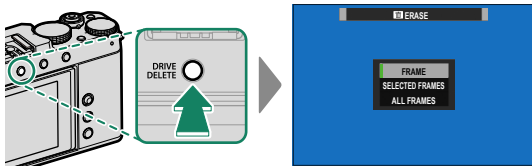


## Deleting Pictures


Use the **DRIVE/DELETE** button to delete pictures.


 Deleted pictures cannot be recovered. Protect important pictures or copy them to a computer or other storage device before proceeding.

- 1 With a picture displayed full frame, press the **DRIVE/DELETE** button and select **FRAME**.



- 2 Choose a picture and press **MENU/OK** to delete it.
  - The picture will be deleted when the **MENU/OK** button is pressed; a confirmation dialog is not displayed. Be careful not to accidentally delete pictures you wish to keep.
  - Additional pictures can be deleted using the **MENU/OK** button. Display the desired pictures and press **MENU/OK** to delete them one by one.

 Protected pictures cannot be deleted. Remove protection from any pictures you wish to delete (194).

- Pictures can also be deleted from the menus using the  **PLAY BACK MENU > ERASE** option (190).