


Parts of the Camera

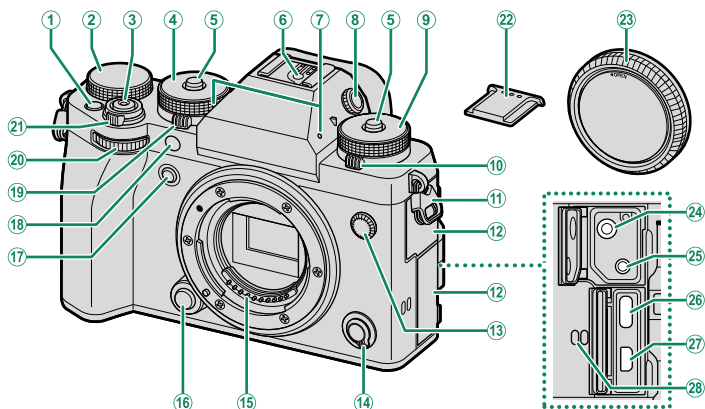

1	Fn1 button.....	321	16	Lens release button.....	35
2	Exposure compensation dial.....	6, 99	17	Fn2 button.....	321
3	Shutter button.....	55	18	AF-assist illuminator.....	150
4	Shutter speed dial.....	5, 72, 74, 78, 80		Self-timer lamp.....	168
5	Dial lock release.....	5		Tally light.....	199
6	Hot shoe.....	342	19	STILL/MOVIE mode dial.....	5, 62, 72
7	Microphone.....	62	20	Front command dial.....	7, 296
8	Diopter adjustment control (lockable).....	11	21	ON/OFF switch.....	46
9	Sensitivity dial.....	5, 96	22	Hot shoe cover.....	342
10	Drive dial.....	6	23	Body cap.....	35
11	Strap clip.....	34	24	Microphone jack (ø3.5 mm).....	67
12	Connector cover.....		25	Remote release connector (ø2.5 mm).....	77
13	Sync terminal.....	345	26	USB connector (Type-C).....	42
14	Focus mode selector.....	83	27	HDMI Micro connector (Type D).....	57
15	Lens signal contacts.....		28	Speaker.....	69, 281