



CORRECTED AF FRAME


View a guide to the actual focus position when framing shots in the OVF with the subject close to the camera. When **ON** is selected, the camera will display the focus position for objects approximately 50 cm from the camera (②) in addition to the standard AF frame (①). Pressing the shutter button halfway displays a green AF frame (③) at the actual focus position.

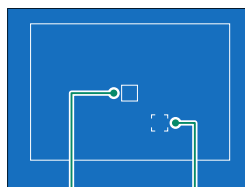

Normal display

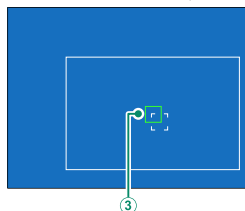

Display when shutter button is pressed halfway

Options	
ON	OFF
<div>  <ul style="list-style-type: none"> The guide will not be displayed when the camera focuses at distances of less than 50 cm. You can temporarily select OFF for the guide display by pressing the center of the focus stick (focus lever). </div>	