



Mode A: Aperture-Priority AE

Choose an aperture and let the camera adjust shutter speed for optimal exposure.

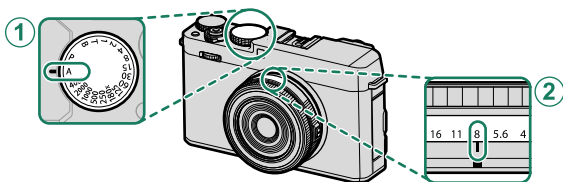

Setting	
① Shutter speed	A (auto)
② Aperture	User-selected

Confirm that **A** appears in the display.

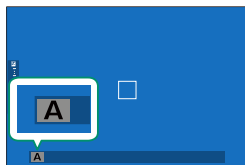

- If the correct exposure cannot be achieved at the selected aperture, shutter speed will be displayed in red.
- If the subject is outside the metering range of the camera, the shutter speed display will show “— —”.

- If the lens is equipped with an aperture ring, aperture can be adjusted by rotating the ring. If you are using a lens without an aperture ring, press the center of the front command dial to cycle to **APERTURE** and then rotate the dial to choose a value.
- Front command dial settings can be adjusted using **2** **FUNCTION/COMMAND DIAL SETTING** > **COMMAND DIAL SETTING** (67, 226).
- Aperture can be adjusted even while the shutter button is pressed halfway.