


# Parts of the Camera

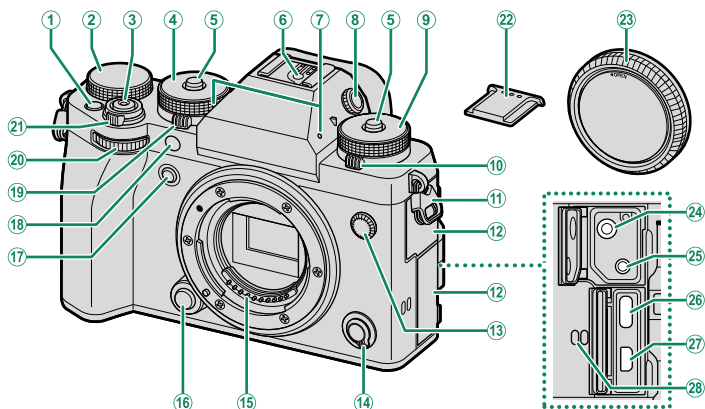

① <b>Fn1</b> button.....	321	⑩ Drive dial .....	6
② Exposure compensation dial.....	6, 99	⑪ Strap clip.....	34
③ Shutter button.....	55	⑫ Connector cover .....	
④ Shutter speed dial .....	5, 72, 74, 78, 80	⑬ Sync terminal.....	345
⑤ Dial lock release .....	5	⑭ Focus mode selector.....	83
⑥ Hot shoe.....	342	⑮ Lens signal contacts .....	
⑦ Microphone.....	62	⑯ Lens release button .....	35
⑧ Diopter adjustment control (lockable) .....	11	⑰ <b>Fn2</b> button .....	321
⑨ Sensitivity dial.....	5, 96	⑱ <b>STILL/MOVIE</b> mode dial.....	5, 62, 72
⑫ Connector cover .....		⑳ Front command dial.....	7, 296
⑬ Sync terminal.....	345	㉑ <b>ON/OFF</b> switch .....	46
⑭ Focus mode selector.....	83	㉒ Hot shoe cover.....	342
⑮ Lens signal contacts .....		㉓ Body cap.....	35
⑯ Lens release button .....	35	㉔ Microphone jack (ø3.5 mm) .....	67
⑰ <b>Fn2</b> button .....	321	㉕ Remote release connector (ø2.5 mm) .....	77
⑱ <b>STILL/MOVIE</b> mode dial.....	5, 62, 72	㉖ USB connector (Type-C) .....	42
⑳ Front command dial.....	7, 296	㉗ HDMI Micro connector (Type D) .....	57
㉑ <b>ON/OFF</b> switch .....	46	㉘ Speaker.....	69, 281
㉒ Hot shoe cover.....	342		
㉓ Body cap.....	35		
㉔ Microphone jack (ø3.5 mm) .....	67		
㉕ Remote release connector (ø2.5 mm) .....	77		
㉖ USB connector (Type-C) .....	42		
㉗ HDMI Micro connector (Type D) .....	57		
㉘ Speaker.....	69, 281		