


The Focus Stick (Focus Lever)


Tilt or press the focus stick to select the focus area. The focus stick can also be used to navigate the menus.

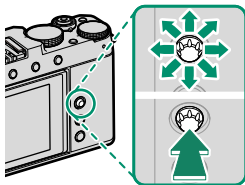

To choose the role played by the focus stick, press and hold the center of the stick or use **FUNCTION/SETTING > FOCUS LEVER SETTING** (224).

The DRIVE/DELETE Button

Pressing the **DRIVE/DELETE** button displays drive-mode menu, where you can choose from the following the drive modes.

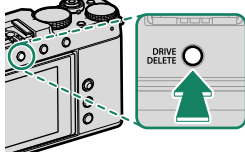

Mode	
Single frame	42
High-speed burst	92
Low-speed burst	92
ISO BKT	88
WHITE BALANCE BKT	88
Bracketing	89

Mode	
HDR	93
Adv. MODE	
• Panorama	95
• Multiple Exposure	98
Filter	100
Movie	48