


SOUND SETTING

Make changes to camera sounds.

To access sound settings, press **MENU/OK**, select the **⚙️ (SET UP)** tab, and choose **SOUND SET-UP**.

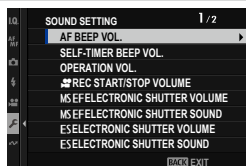

AF BEEP VOL.

Choose the volume of the beep that sounds when the camera focuses. The beep can be muted by selecting **OFF**.

Options

🔊 (high)

🔊 (medium)

🔊 (low)

🔊 OFF (mute)

SELF-TIMER BEEP VOL.

Choose the volume of the beep that sounds while the self-timer is active. The beep can be muted by selecting **OFF**.

Options

🔊 (high)

🔊 (medium)

🔊 (low)

🔊 OFF (mute)