
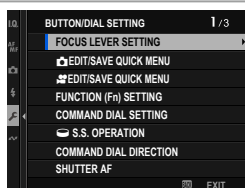


## BUTTON/DIAL SETTING


Access options for camera controls.

To access control options, press **MENU/OK**, select the  (**SET UP**) tab, and choose **BUTTON/DIAL SETTING**.




### FOCUS LEVER SETTING


Choose the functions performed by the focus stick (focus lever).

Option	Description
<b>LOCK (OFF)</b>	The focus stick cannot be used during shooting.
<b>PUSH  TO UNLOCK</b>	Press the stick to view the focus-point display and tilt the stick to select a focus point.
<b>ON</b>	Tilt the stick to view the focus-point display and select a focus point.

### EDIT/SAVE QUICK MENU

Choose the items displayed in the quick menu during still photography ( 379).

### EDIT/SAVE QUICK MENU

Choose the items displayed in the quick menu when filming movies ( 379).