



Shutter-Priority AE (S)

Choose a shutter speed and let the camera adjust aperture for optimal exposure.


- 1 Rotate the mode dial to S.

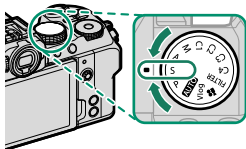


S will appear in the display.

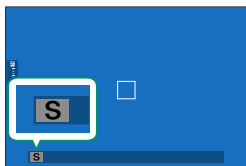

- 2 Rotate the front command dial to choose a shutter speed.

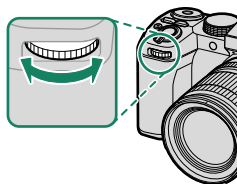

 The roles played by the front command dial can be changed using **■ BUTTON/DIAL SETTING > COMMAND DIAL SETTING**.

-  If the correct exposure cannot be achieved at the selected shutter speed, aperture will be displayed in red.
- If the subject is outside the metering range of the camera, the aperture display will show “— —”.