


## Lenses with No Aperture Rings

The method used to adjust aperture can be selected using **■ BUTTON/DIAL SETTING > APERTURE SETTING**. When an option other than **AUTO** is selected, aperture can be adjusted using the front command dial.

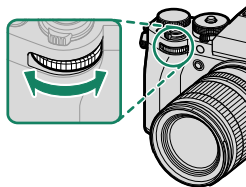

**■** Aperture control defaults to the front command dial, but can be re-assigned to the rear command dial using **■ BUTTON/DIAL SETTING > COMMAND DIAL SETTING**.

## Lenses with O.I.S. Switches

If the lens supports optical image stabilization (O.I.S.), the image stabilization mode can be chosen in the camera menus. To activate image stabilization, slide the O.I.S. switch to **ON**.

