



## Mode S: Shutter-Priority AE

Choose a shutter speed and let the camera adjust aperture for optimal exposure.

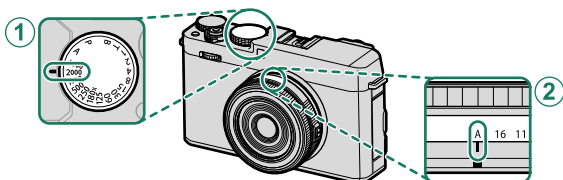

Setting	
① Shutter speed	User-selected
② Aperture	A (auto)

Confirm that S appears in the display.

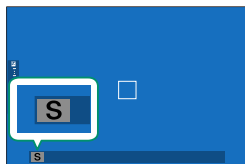

- ❗ If the correct exposure cannot be achieved at the selected shutter speed, aperture will be displayed in red.
- If the subject is outside the metering range of the camera, the aperture display will show “— —”.

- 📖 Shutter speed can also be adjusted in increments of  $\frac{1}{3}$  EV by rotating the front command dial.
- For faster shutter speeds, enable the electronic shutter, set the shutter speed dial to **4000** or **T**, and rotate the front command dial.
- If you are using a lens with an aperture ring, rotate the ring to **A** (auto). If you are using a lens without an aperture ring, first select **AUTO** or **AUTO+MANUAL** for **📷 BUTTON/DIAL SETTING > APERTURE SETTING**, then press the center of the front command dial to cycle to **APERTURE** and rotate the dial until the aperture value is displayed in white.
- Front command dial settings can be adjusted using **📷 BUTTON/DIAL SETTING > COMMAND DIAL SETTING** (📖 67, 226).
- Shutter speed can be adjusted while the shutter button is pressed halfway.