


Adjusting Settings for Connection to FTP Servers

Adjust settings for connection to the destination FTP server.


- 1 Select **CREATE NEW** in the FTP server settings display.



You can also select or edit existing settings.

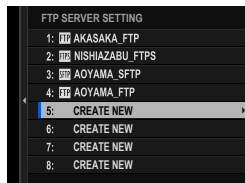

- 2 Choose an FTP server type.

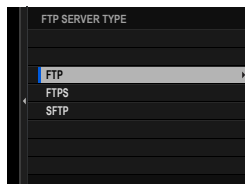

- 3 Enter the FTP server address.



- 4 Enter the FTP server port number.

