


## The Q (Quick Menu) Button

Press **Q** for quick access to selected options.

### The Quick Menu Display

At default settings, the quick menu contains the following items:

- Use **Q** **BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING** to choose the function performed by the **Q** (quick menu) button or assign its default function to other controls (252).
- To disable the **Q** (quick menu) button, select **NONE** for **Q** **BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING > Q BUTTON SETTING**.

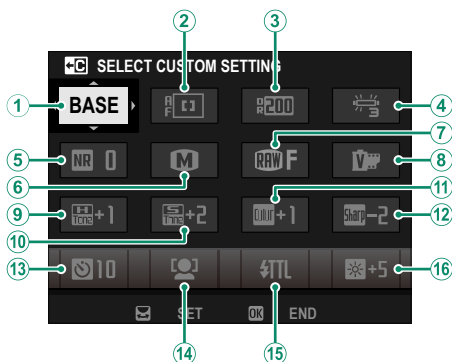

- |                         |                              |
|-------------------------|------------------------------|
| ① SELECT CUSTOM SETTING | ⑨ HIGHLIGHT TONE             |
| ② AF MODE               | ⑩ SHADOW TONE                |
| ③ DYNAMIC RANGE         | ⑪ COLOR                      |
| ④ WHITE BALANCE         | ⑫ SHARPNESS                  |
| ⑤ NOISE REDUCTION       | ⑬ SELF-TIMER                 |
| ⑥ IMAGE SIZE            | ⑭ FACE/EYE DETECTION SETTING |
| ⑦ IMAGE QUALITY         | ⑮ FLASH FUNCTION SETTING     |
| ⑧ FILM SIMULATION       | ⑯ EVF/LCD BRIGHTNESS         |

The quick menu shows the options currently selected for items ②–⑯, which can be changed as described on page 249.