


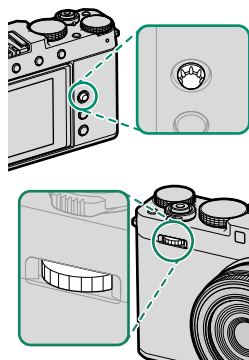















Selecting a Focus Point

Use the focus stick (focus lever) to choose the focus point and the front command dial to choose the size of the focus frame. The procedure varies with the option selected for AF mode.



	Focus stick		Front command dial	DISP/BACK button
AF mode	 Tilt	 Press	 Rotate	 Press
	Highlight focus point	Select highlighted focus point	Choose from 6 frame sizes	Select center focus point
			Choose from 3 frame sizes	
			—	

- Manual focus-point selection is not available when  **WIDE/TRACKING** is selected in focus mode .
- If  **ALL** is selected for AF mode, you can rotate the front command dial in the focus-point selection display to cycle through AF modes in the following order:  **SINGLE POINT** (6 frame sizes),  **ZONE** (3 frame sizes), and either  **WIDE** (focus mode ) or  **TRACKING** (focus mode 74