



IMAGE QUALITY SETTING (Movie Recording)


Adjust image quality settings for movies.

To display image quality settings, press **MENU/OK** in the movie shooting display and select the **IQ** (IMAGE QUALITY SETTING) tab.

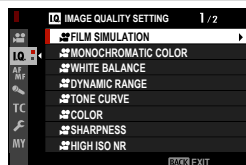


 The options available vary with the shooting mode selected.


FILM SIMULATION

Options are the same as those for still photography, but settings must be adjusted separately ( 106).

MONOCHROMATIC COLOR

Options are the same as those for still photography, but settings must be adjusted separately ( 108).

WHITE BALANCE

Options are the same as those for still photography, but settings must be adjusted separately ( 109).