

DiHAC Device GSM/GPRS SIM

Inserting your Micro 2G/3G/4G SIM


IMPORTANT:

Use a standard Micro SIM only.

Don't cut a regular SIM card and insert it into the SIM slot in DiHAC device. It's thicker than the standard Micro SIM card and may get stuck in the slot.

The DiHAC device casing is not removable and Battery mustn't be removed frequently.

Don't pry the casing open or remove the battery until get the battery warning message to your mobile phone. Opening casing will invalidate the warranty.

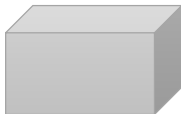




1. Make sure your DiHAC device is off and is turning backside. Open the SIM slot cover which is labeled.



2. Place your Micro SIM card into the metal housing with the gold facing **down** and the cut-off corner facing **out**.



3. To remove the Micro SIM from SIM slot, push cut-off corner of the SIM by using your finger and then pull the SIM out.

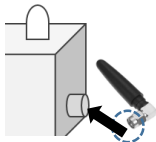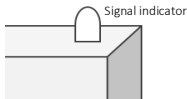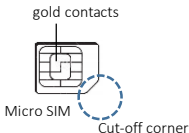

Note: You can insert 2G/3G/4G any kind of Micro SIM card into SIM slot. You can select your signal type of your Micro SIM by using mobile phone. When you insert the SIM, after several seconds it will connect the GSM network automatically. If the SIM is connected to the GSM network, the green LED is blinking by 2 seconds. If it isn't, the green LED is blinking by 1 seconds.

If it isn't connected to GSM network, try to another place or another signal type.

Want some guidance about your DiHAC device?

Go to

https://drive.google.com/drive/folders/1qUKkgP_JRFFUmzCWEmxXu0mMMMe38_52t/ to find the user guide, latest news, and more.

© 2020 S3 Engineering Lanka Corporation. All rights reserved. S3 logo, the DiHAC logo are trademarks of S3 Engineering Lanka Corporation.

All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.