

- If one or more windows are partially or completely open.
- If light objects are left inside the vehicle, e.g. loose paper or items hanging from the interior mirror.
- If the vibrate function of a mobile left inside the vehicle is activated.

## Note

- It is not possible to permanently deactivate the interior monitoring and anti-tow systems.
- If any doors or the rear lid are open when the anti-theft alarm is activated, only the alarm will be activated. The interior monitoring and anti-tow systems will only activate once all of the doors and the rear lid are closed.
- When the interior monitoring and anti-tow systems are switched off, the “Safe” security system is also switched off >>> page 96.

## Doors

### Introduction

The doors and rear lid can be locked manually and partially opened, for example if the key or the central locking is damaged.

### WARNING

Opening and closing doors carelessly can cause serious injury.

- If the vehicle is locked from outside, the doors and windows cannot be opened from the inside.
- Never leave children or disabled people alone in the car. They could be trapped in the car in an emergency and will not be able to get themselves to safety.
- Depending on the time of the year, temperatures inside a locked and closed vehicle can be extremely high or extremely low resulting in serious injuries and illness or even death, particularly for young children.

### WARNING

Getting in the way of the doors and the rear lid is dangerous and can lead to serious injury.

- Open and close the doors and the rear lid only when there is nobody in the way.

### NOTICE

In certain weather conditions, ice or snow may accumulate on the lower front part of the doors between the door frame and the door; do not force the doors open until you are sure that there is no ice or snow.

### NOTICE

When opening and closing in an emergency, carefully disassemble components and then reassemble them carefully to avoid damage to the vehicle.

### Door opening

The door opening/closing system is electronic.

#### Opening doors from the outside

The exterior door handles have a surface on the interior to act as a push button.

1. Unlock the vehicle >>> page 94.
2. Grasp the door handle and press the interior surface of the handle. The door will open.

### Mechanical opening of the door in an emergency.



**Fig. 72** Mechanical door opening.

In an emergency or if the vehicle's battery is discharged, pull the door handle firmly to dislodge the door. >>> **Fig. 72**


### Opening doors from the inside

1. Pull the door handle to the point of resistance and push the door. Do not pull the handle beyond the resistance point, the lock will go into mechanical mode (electronic opening will be disabled). If in mechanical mode, pull the handle back to the end of its travel to open the lock.


#### Note

If the vehicle is locked from the outside (without the "Safe" >>> page 96 system), the door must be opened from the inside by pulling the handle twice to the end of its travel.

### Emergency unlocking or locking of the driver's door

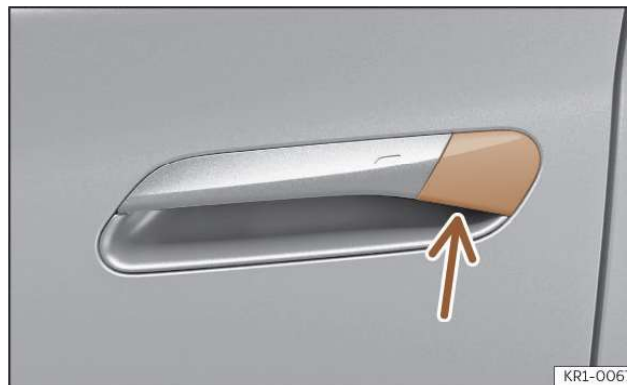

**Fig. 73** Driver door lever: hidden lock cylinder.

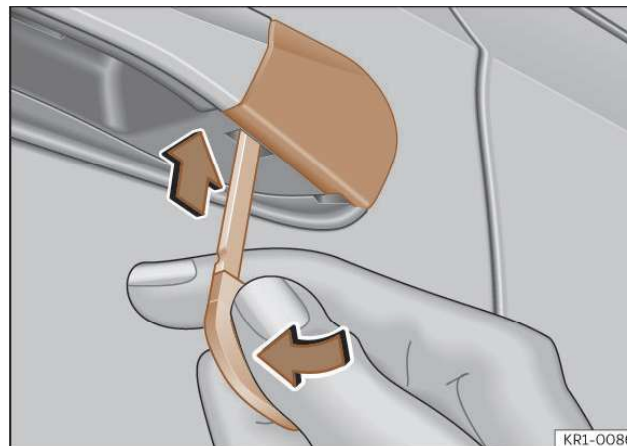

**Fig. 74** Driver's door handle: remove the cover.

If the central locking system should fail to operate, the driver door can still be locked and unlocked by turning the key in the lock.

As a general rule, when the driver door is locked manually all other doors are locked. When it is unlocked manually, only the driver door opens. Please observe the instructions relating to the anti-theft alarm system >>> **page 97**.

- Remove the key blade from the vehicle key >>> **page 90**.
- Insert the key shaft into the lower opening in the cover on the driver door handle then lever in the direction of the arrow >>> **Fig. 74**.
- Insert the key blade into the lock cylinder to unlock or lock the vehicle.

### Special characteristics

- The anti-theft alarm will remain active when vehicles are unlocked. However, the alarm will not be triggered >>> **page 97**.
- After the driver door is opened, you have 15 seconds to switch on the ignition. Once this time has elapsed, the alarm is triggered.
- Switch the ignition on. The electronic immobilizer recognises a valid vehicle key and deactivates the anti-theft alarm system.

## Note

The anti-theft alarm is not activated when the vehicle is locked manually using the key shaft >>> page 94.


## Emergency lock of doors without lock cylinders



**Fig. 75** Locking the door manually.

If the central locking system fails or the vehicle's battery goes flat, doors with no lock cylinder will have to be locked separately.

The emergency lock is located on the front of the front passenger's door and the rear doors. It can only be seen if the door is open.

- If necessary, remove the rubber seal  from the front of the door >>> **Fig. 75**.
- Insert the key in the inside slot and turn it to the right as far as it will go (if the door is on the right side) or to the left (if the door is on the left side).
- Replace the cap.

Once the door has been closed it can no longer be opened from the outside. Pull the interior door handle once to unlock and open the door.

## Electric child lock




**Fig. 76** On the driver's door: touch panel for the electric child lock.

- ① Touch panel for the electric child lock. The electric child lock prevents both the opening of the rear doors from the interior and the operation of the electric windows in the rear doors.

## Activation and deactivation of the electric child lock

- **Activation:** tap the touch panel >>> **Fig. 76** ①.
- **Deactivation:** press the touch panel again.

The indicator lamp  on the touch control lights up yellow when the electric child lock is activated >>> **Fig. 76** ①.

## Error message in the infotainment system or on the instrument cluster screen

If the electric child lock is activated and a rear door is opened at the same time, the electric child lock on this door cannot be switched on or off.

An error message is shown in the infotainment system or on the instrument cluster display.

1. Tap the electric child lock button again to synchronise the status of the rear doors.
2. If the error message does not disappear, have the vehicle checked by an appropriately qualified workshop. CUPRA recommends that you visit a CUPRA dealer.