




# Artus Lite

## Getting Started

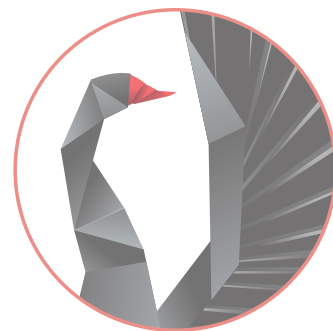

## Instructions

1. Unbox and verify that the package contents align with the packing slip and are free of damage
2. Connect the Artus Lite to your 24V power supply using either the 4-Pin or 8-Pin M8 Cable, following the pinouts shown below
3. Connect the USB-C between the Artus Lite and a system with the Artus API installed (additional requirements listed on the Github README)
4. At power on, a blue LED indicator will illuminate showing the Artus Lite is powered. Once the LED turns green, the hand is ready!

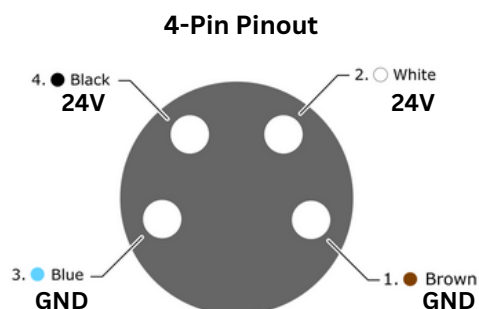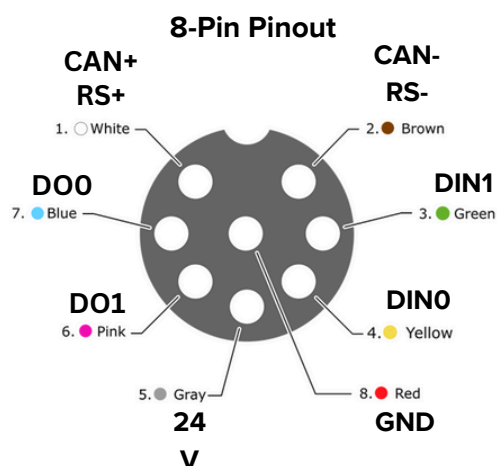

## Additional Equipment Requirements

- 24V Power Supply (Typ. 100W max 250W)
- Artus API (access on GitHub via QR code)

