

# Artus Lite


## Getting Started



### Package Contents

- Artus Lite
- M8 8-Pin Cable Assembly
- M8 4-Pin Cable Assembly
- USB-C Cable


#### 8-Pin Pinout

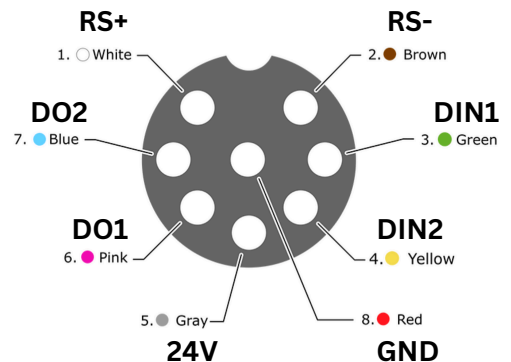

### Requirements

- 24V Power Supply (Typ. 100W)
- Artus API (available on Github)

#### 4-Pin Pinout

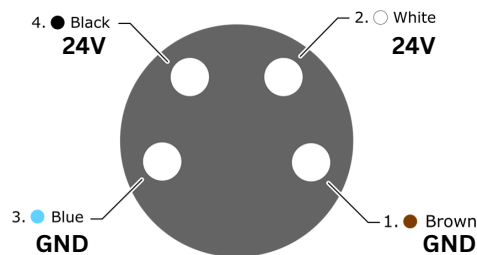

### Instructions

1. Unbox and verify that all package contents are included and free of damage
2. Connect the Artus Lite to your 24V power supply using either the 4-Pin or 8-Pin M8 Cable, following the pinouts shown above
3. Connect the USB-C between the Artus Lite and a system with the Artus API installed (additional requirements listed on the Github README)
4. At power on, a blue LED indicator will illuminate showing the Artus Lite is ready