

Artus Lite


Getting Started




Instructions

1. Unbox and verify that the package contents align with the packing slip and are free of damage
2. Connect the Artus Lite to your 24V power supply using either the 4-Pin or 8-Pin M8 Cable, following the pinouts shown below
3. Connect the USB-C between the Artus Lite and a system with the Artus API installed (additional requirements listed on the Github README)
4. At power on, a blue LED indicator will illuminate showing the Artus Lite is ready

8-Pin Pinout

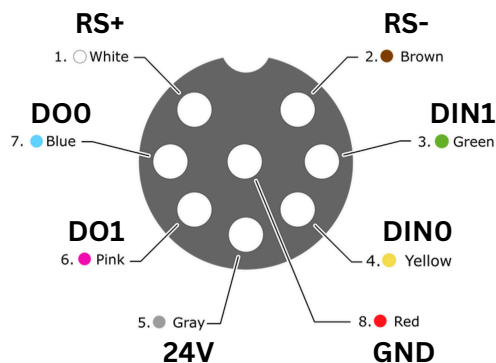

4-Pin Pinout

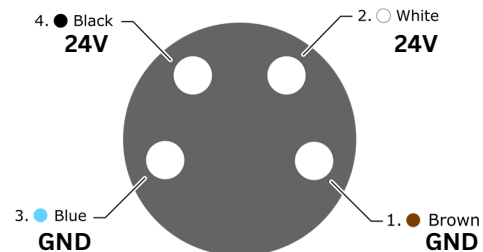

Additional Equipment Requirements

- 24V Power Supply (Typ. 100W)
- Artus API (available on Github)