


WEATHERWISE

The Ultimate Solution for your Home
Weather Concerns

MINI WEATHER STATION

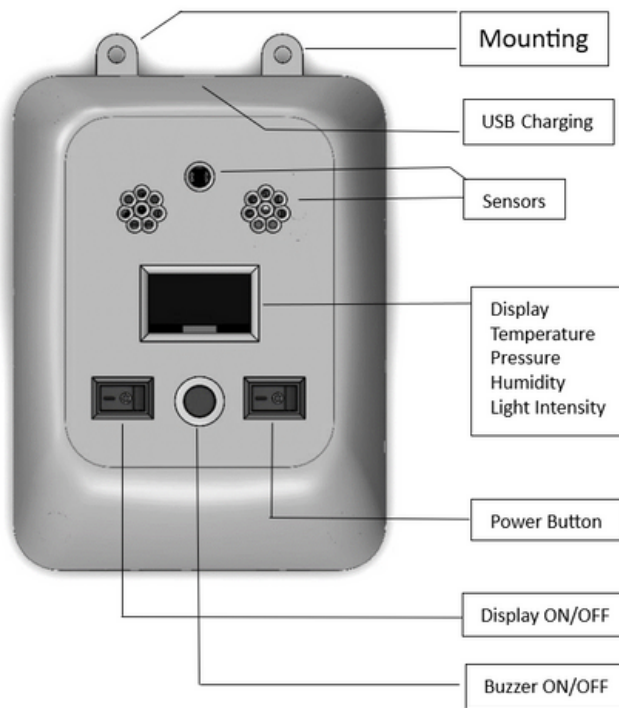

Specifications

	Accuracy	Operating Range
Temperature	$\pm 0.5\text{ }^{\circ}\text{C}$	$-45\text{ to }85\text{ }^{\circ}\text{C}$
Pressure	1 hPa	$300\text{ to }1100\text{ hPa}$
Humidity	$\pm 2\%$	$0\text{ to }100\%$
Light Intensity	$\pm 20\%$	$0\text{ to }100\%$

- 24*2 hours battery life
- Rechargeable battery
- Accurate Measurements
- Remote weather monitoring

Installing

- Use mounting holes to mount on the wall using nails.

Setting Up the Device

- Turn On the device using "Power Button".
- Turn on your WiFi and connect to "AutoConnectAP" access point.
- Go to any browser and type the following IP address
- 192.168.4.1
- Go to "Configure WiFi" option and save your WiFi credentials.

AutoConnectAP

WiFiManager

Configure WiFi

Configure WiFi (No S

Info

Reset

SSID

Password

Parameter Label

default value

Save

Refresh

No AP set

- To avoid giving same credentials whenever logging, contact our Customer Support Service at the installation stage. (Then after you can change your WiFi network credentials only contacting our Customer Support Service).

- To change extreme conditions for setting alarm, contact Customer Support Service.

- Extreme Conditions:


Temperature: <20 & >35

Humidity: <30 & >80

Pressure: <900 & >1200


Setting Up the Mobile Application & Web Dashboard

- Go to PlayStore & Download "BlynkIoT" application.
- Feel free to share your email address at purchasing.
- An ID & an invitation will be sent to your email address.
- View & analyze data through both mobile application & web dashboard

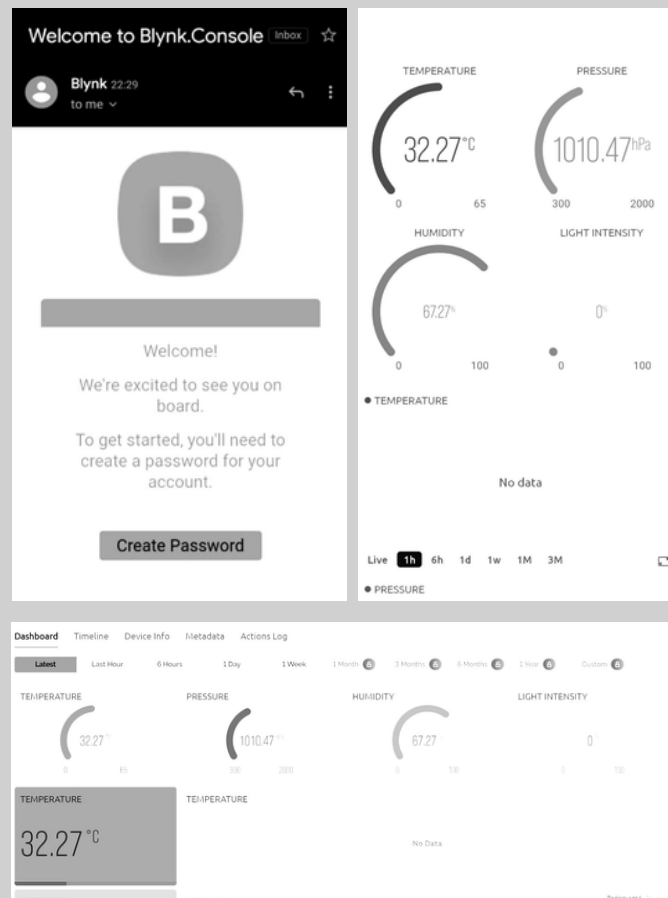

Charging

- Use a Micro USB cable with a 5V adapter to charge the device

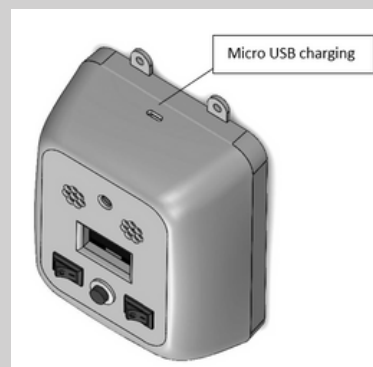

Contact Us

WeatherWise Mini Weather Stations
69/6,
2nd Lane,
Galle Road,
Colombo.

Hotline: 0112467282
Mobile: 0712348734

Visit our website: www.weatherwise.com