


SERVICING FIXTURES & TOOLS

[illegible]


MECHANICAL CHASSIS ASSEMBLY (1)

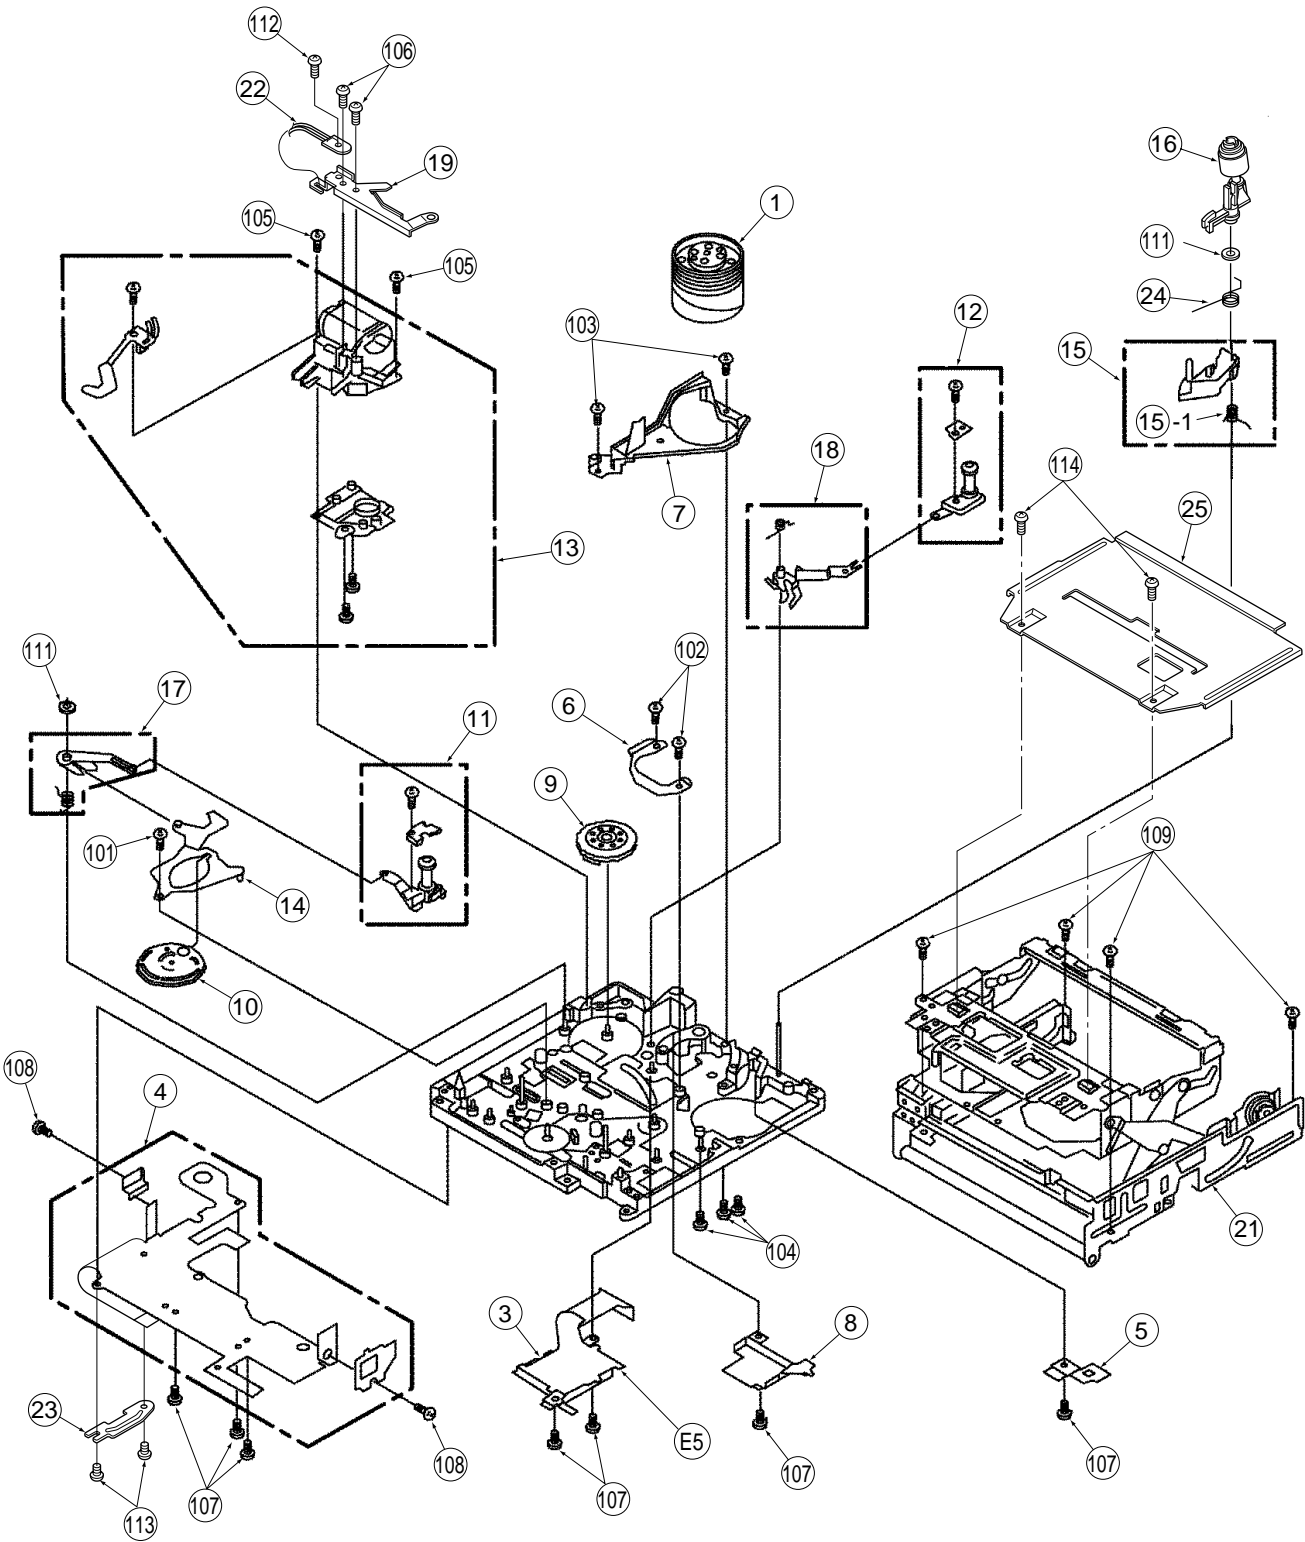

MECHANICAL CHASSIS ASSEMBLY (1)

[illegible]

MECHANICAL CHASSIS ASSEMBLY (2)

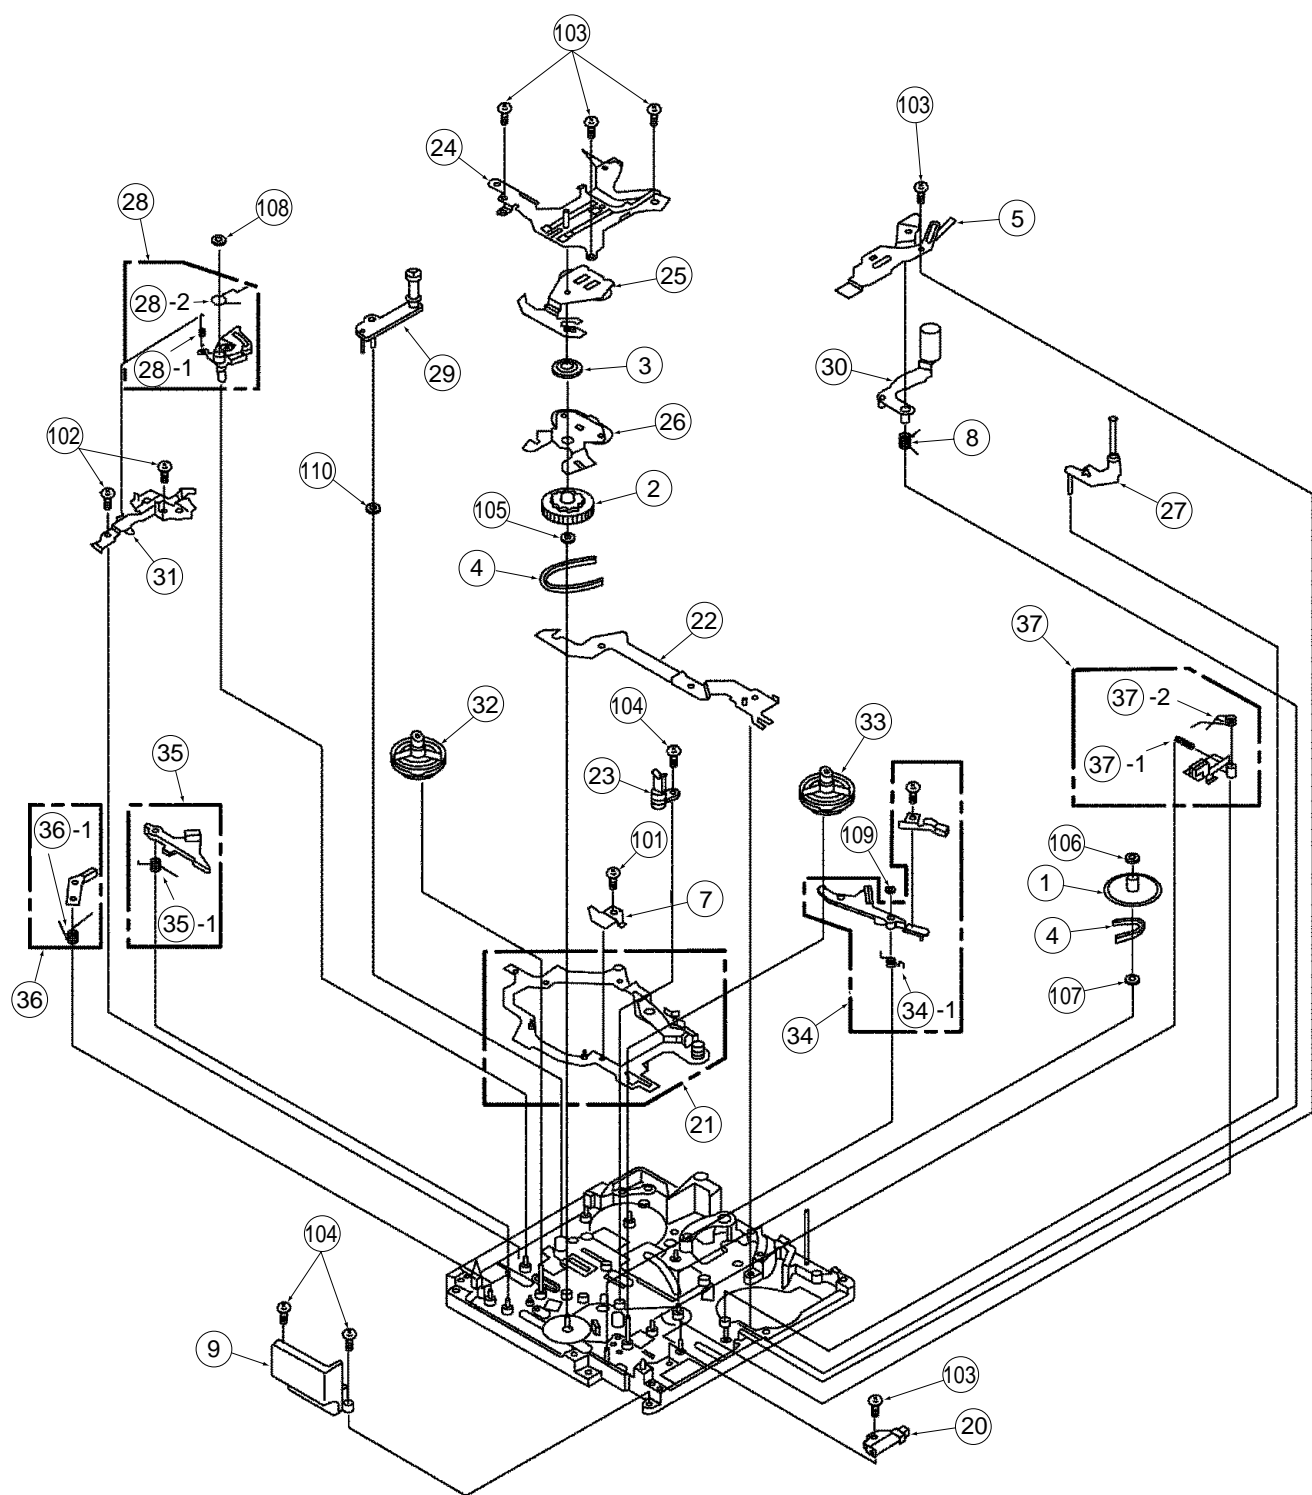


MECHANICAL CHASSIS ASSEMBLY (2)


[illegible]

Components identified with the mark have the special characteristics for safety. When replacing any of these components, use only the same type.




FRAME & CASING PARTS ASSEMBLY (1)

Components identified with the mark  have the special characteristics for safety. When replacing any of these components, use only the same type.

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
					78	VSC5478	CAMERA C.B.A. SHIELD	2	
1	VWJ1583	SIDE JACK FLEX.	1		79	VMZ3341	SHIELD INSULATION PLATE 2	1	
2	VWJ10E5050L0	FLAT CABLE	1		 80	VMG1514	POWER HEAT SINK SHEET 1	1	
3	VML3710	CLUTCH SLIDE PLATE	1		 81	VSC5471	POWER HEAT SINK SHEET	1	
4	VMP7341	CLUTH ANGLE	1		 82	VMG1515	POWER HEAT SINK SHEET 2	1	
5	VGH4612	JACK NAME PLATE B	1		83	VGQ6923	VF CASE (L)	1	
6	VGH4615	JACK NAME PLATE A	1		84	VEK8719	BATTERY CATHER	1	K4ZZ04000026
7	VJF1470	SIDE JACK CAP	1		85	VWJ10E5050L0	FLAT CABLE	1	
8	VKM5983	CENTER FRAME	1		86	VMG1520	TOGGLE SW CUSHION	1	
9	VMZ3318	AWB COVER HOLDER SHEET	1		87	VJF1468	XLR CAP	2	
10	VKW3078	AWB WINDOW	1		88	VMG1517	CCD HEAT SINK	1	
11	VMD3345	TRIPOD FRAME	1		89	VMZ3356	FPC PROTECT SHEET	1	
12	VMZ3323	EVR INSULATION SHEET	1		90	VMZ3357	FPC LOCK SHEET	1	
14	VGQ6902	MIC SWITCHING KNOB HOLDER	1		91	VMZ3345	LED INSULATION PLATE	1	
15	VGU9246	ZOOM CLUCH KNOB	1						
16	VGU9194	MIC SWITCHING KNOB	2						
17	VMG1460	SLIDE SW RUBBER COVER	6						
18	VGU9214	SLIDE KNOB	4		100	XQN2+B4FN	SCREW	35	
19	VGU9200	CAMERA OP BUTTON	1		101	XQN16+B4FZ	SCREW	3	
20	VGQ6896	FOCUS KNOB HOLDER	1		102	XYN26+A6FZ	SCREW	4	
21	VGU9213	FOCUS SLIDE KNOB	1		103	XYN2+C4	SCREW	5	
22	VGU9211	FOCUS BUTTON	1		104	XQN16+BJ4FZ	SCREW	2	
23	VGQ6894	ND SWITCHING PIECE	1		105	XQN2+C5	SCREW	6	
24	VGQ6906	HOLDER BLIND SHEET	1		106	XWG2	WASHER	1	
25	VGU9222	ND SWITCHING KNOB	1		107	XQN16+BJ3FZ	SCREW	1	
26	VMB3681	FOCUS KNOB SPRING	1		108	XQN2+B35FN	SCREW	2	
27	VGQ6905	ND FILTER HOLDER	1		109	XYN2+F5	SCREW	2	
28	VGU9228	IRIS BUTTON	1		110	XYN2+C6	SCREW	2	
29	VGQ6897	SPEAKER HOLDER	1		111	XQN2+BJ6	SCREW	2	
30	VEK9842	SPEAKER ASS'Y	1		112	XQN2+B3FZ	SCREW	2	
31	VMP7330	SPEAKER HOLDER ANGLE	1		113	XQN2+BJ4FZ	SCREW	8	
32	VMT1347	SPEAKER HOLDER CUSHION	1		 114	VMX3286	WASHER	1	
33	VMT1367	P.C.B. HOLDER CUSHION	1		115	XQN2+B4FZ	SCREW	21	
34	VGU9250	RUBBER BUTTON 2	1						
35	VGU9251	RUBBER BUTTON 3	1						
36	VGU9202	RUBBER BUTTON 1	1						
 37	VSC5460	SIDE (R) SHIELD PLATE	1		E2	VEP23571A	CAMERA C.B.A.	1	
 38	VMZ3317	C.B.A. PROTECT SHEET	1		E2-1	VEP001A7A	CAMERA SUB 1 C.B.A.	1	
39	VGQ7175	ND KNOB SHEET	2		E2-2	VEP001A7B	CAMERA SUB 2 C.B.A.	1	
40	VGQ6874	HINGE COVER	1		E2-3	VEP001A7C	CAMERA SUB 3 C.B.A.	1	
41	VGU9212	AUDIO ROTATING KNOG	2		E3	VEP01914A	POWER C.B.A.	1	
42	VGU9197	MONITOR LOCK KNOB	1		E3-1	VEP001A6A	POWER SUB C.B.A.	1	
43	VGP5800	SIDE CASE (R)	1		E4	VEP01922A	POWER 2 C.B.A.	1	
44	VMS7187	LCD LOCK SHAFT	1		E6	VEP04817A	R-SIDE C.B.A.	1	
45	VMP7331	OPENER HOLDER ANGLE	1		E7	VEP06E92A	CAMERA OP1 C.B.A.	1	
46	VMB3661	POP UP SPRING	1		E8	VEP06E93A	CAMERA OP2 C.B.A.	1	
47	VGQ6901	MONITOR KNOB	1		E11	VEP00020A	MENU C.B.A.	1	
48	VMB3659	MONITOR OPENER SPRING	1		E16	VEP000Y2A	EVR CONNECT C.B.A.	1	
49	VKN0169	SPEAKER NET	1		E18	VEP000Y4A	LCD OPEN SW C.B.A.	1	
50	VGU9223	W.BAL KNOB (LOWER)	1		E25	VEP22331A	GYRO C.B.A.	1	
51	VGU9217	W.BAL KNOB (UPPER)	1		E26	VEP04816A	SIDE JACK C.B.A.	1	
52	VMG1418	RAIN COVER RUBBER (B)	1		E27	VEP04815A	EXT MIC CH2 C.B.A.	1	
53	VMG1467	VR WATERPROOF RUBBER	2		E28	VEP04825A	EXT MIC CH1 C.B.A.	1	
54	VMG1286	CUSHION RUBBER	4		E29	VEP06E89A	MODE SW C.B.A.	1	
55	VMZ3316	MONITOR FPC PROTECT SHEET	1		E30	VEP01923A	DC IN C.B.A.	1	
56	VGQ4088	3CCD BADGE TAPE	1		E31	VEP01915A	BATTERY C.B.A.	1	
57	VB0322	3CCD BADGE	1						
59	VGP5813	BACK PANEL	1						
60	VGU8582	BATTERY LOCK BUTTON	1						
61	VMB3210	BATTERY LOCK SPRING	1						
62	VGU9218	MODE SELECT KNOB	1						
63	VMP7340	DCIN ANGLE	1						
64	VGL1012	MODE PANEL LIGHT	2						
65	VGU9219	CAMERA/VCR BUTTON	2						
66	VGU9209	JOY STICK BUTTON	1						
67	VGU9199	MENU BUTTON	1						
68	VGQ6924	VF CASE (R)	1						
 69	VMZ3315	BATTERY BLIND SHEET	1						
 71	VMG1516	CCD HEAT SINK SHEET	1						
72	VGQ6886	EVR COVER	1						
73	VWJ13E5085L0	FLEX. CABLE	1						
74	VWJ1585	R SIDE FPC	1						
75	VMP7357	C.B.A. HOLDER ANGLE	1						
76	VKC0594	VF HINGE	1						
77	VMZ3340	SHIELD INSULATION PLATE 1	1						


FRAME & CASING PARTS ASSEMBLY (2)

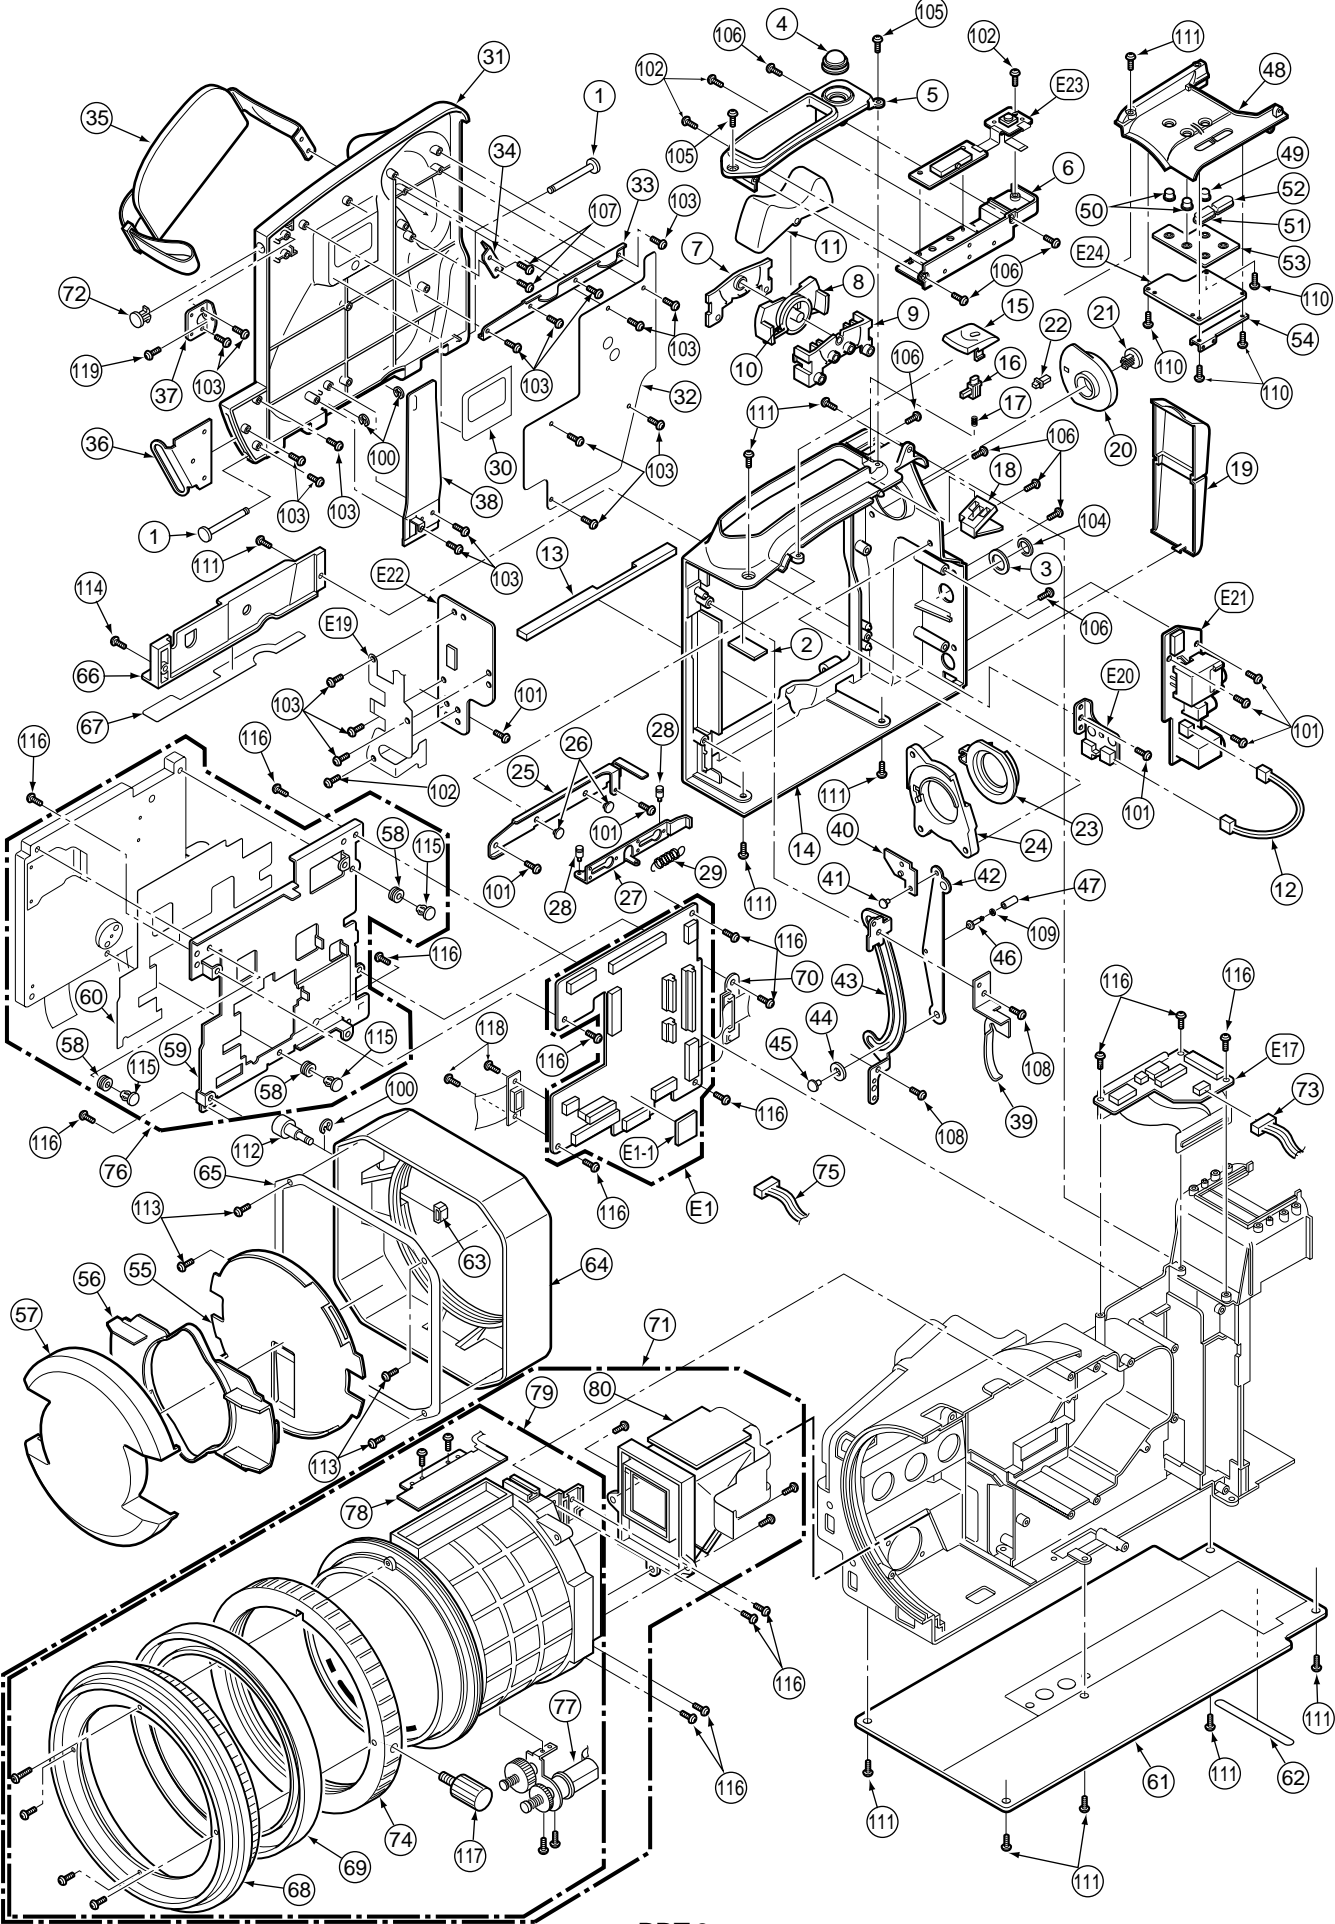

FRAME & CASING PARTS ASSEMBLY (2)

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
1	VMS7186	ROTATING SHAFT	2		75	VEE0793	MIK IO	1	
2	VMZ3097	POWER INSULATION SHEET C	1		76	VXY1738S	MECHA CHASSIS ASSY	1 (M)	
3	VMX0531	CLATCH SPACER	1		77	L6DABFKD0001	ZOOM MOTOR ASSY	1	
4	VGU9203	REC CHECK RUBBER BUTTON	1		78	EVAJGGVA3B14	ZOOM ENCODER	1	
5	VGQ6903	ZOON LEVER CASE (R)	1		79	VXW0565	LENS ASSY	1	
6	VGQ6904	ZOON LEVER CASE (L)	1		80	VXQ1083	PRISM ASSY	1	
7	VGQ6996	ZOOM HOLDER (R)	1						
8	VGQ6997	ZOOM SPRING HOLDER PIECE	1						
9	VGQ6928	ZOOM SW HOLDER	1		100	XUC15FX	E-RING	3	
10	VMB3663	COIL SPRING ZOOM	1		101	XQN2+B3FN	SCREW	7	
11	VGU9215	ZOOM LEVER	1		102	XQN16+BJ3FZ	SCREW	4	
12	VEE0U25	EJECT 1	1		103	XQN2+BJ4FZ	SCREW	19	
13	VMT1350	CASSETTE COVER GASKET	1		104	VHN0194	SPACER	1	
14	VGPF5801	SIDE CASE (L)	1		105	XQN16+B4FZ	SCREW	2	
15	VGU9206	EJECT KNOB	1		106	XQN16+BJ4FZ	SCREW	8	
16	VGU9216	EJECT LOCK BUTTON	1		107	XTB26+6GFZ	SCREW	2	
17	VMB3662	EJECT LOCK BUTTON SPRING	1		108	XYN2+C6	SCREW	2	
18	VGQ6899	EJECT KNOB FIX PIECE	1		109	VMX2535	WASHER	1	
19	VJF1469	H.P CAP	1		110	XQN2+B35FN	SCREW	4	
20	VGU9204	POWER BUTTON	1		111	XQN2+B4FZ	SCREW	11	
21	VGU9205	S/S BUTTON	1		112	VHD1546	SCREW	1	
22	VGU9201	POWER LOCK BUTTON	1		113	XQN2+BJ5FZ	SCREW	4	
23	VGQ6998	S/S BUTTON HOLDER	1		114	XQN2+C6FZ	SCREW	1	
24	VGQ6884	S/S HOLDER PIECE	1		115	VHD1100	SCREW	3	
25	VMP7337	LOCK LEVER HOLDER ANGLE	1		116	XQN2+B4FN	SCREW	16	
26	VMS7211	PIN	2		117	VHD1538	SCREW	1	
27	VMP7339	CASSETTE LOCK LEVER	1		118	VHD0866	SCREW	2	
28	VMS7203	EJECT LOCK PIN	2		119	XYN2+C6	SCREW	1	
29	VMB3680	EJECT LOCK BUTTON SPRING	1						
30	VGH4613	GRIP COVER WINDOW	1						
31	VGPF5804	CASSETTE COVER	1						
32	VGFO952	SHIELD PLATE	1		E1	VEP03G21A	VTR C.B.A.	1	
33	VMP7338	CASSETTE COVER FIX ANGLE	1		E1-1	VEP001A4A	VTR SUB C.B.A.	1	
34	VMP6741	BELT HOLDER ANGLE	1		E17	VEP000Y3A	VC CONNECT C.B.A.	1	
35	VFB0215	GRIP BELT	1		E19	VEP000Y6A	R JACK CONNECT C.B.A.	1	
36	VMP7325	GRIP BELT ANGLE (FRONT)	1		E20	VEP000Y7A	EJECT C.B.A.	1	
37	VMP7501	HOLDER ANGLE	1		E21	VEP04819A	REAR JACK C.B.A.	1	
38	VMC1092	CASSETTE DOWN SPRING	1		E22	VEP06E96A	POWER SW C.B.A.	1	
39	VMC1835	LINK DUMPER SPRING	1		E23	VEP06E90A	ZOOM SW C.B.A.	1	
40	VMA9219	OPEN ANGLE (A)	1		E24	VEP000Y9A	TOP OP C.B.A.	1	
41	VMS5748	LINK PIN (B)	1						
42	VMA9220	OPEN LINK (B)	1						
43	VMA0P91	LINK ANGLE	1						
44	VMX2397	ARM STAND ROLLER	1						
45	VMS7293	ARM STAND PIN	1						
46	VMS5747	RINK PIN (A)	1						
47	VDP1653	ROTATION ROLLER	1						
48	VGPF5798	TOP PANEL	1						
49	VGU9195	REC BUTTON	1						
50	VGU9210	REC/DUB BUTTON	2						
51	VGU9249	AUDIO MONITOR BUTTON (-)	1						
52	VGU9196	AUDIO MONITOR BUTTON (+)	1						
53	VMG1478	TOP SW BUTTON RUBBER	1						
54	VMP7432	TOP SUPPORT ANGLE	1						
55	VGQ6919	CAP COVER	1						
56	VGQ6920	LENS COVER KNOB	1						
57	VGQ6883	LENS CAP	1						
58	VMG1463	DUSTPROOF RUBBER	3						
59	VMP7336	MECHA HOLDER ANGLE	1						
60	VMZ3295	MECHA BARRIER	1						
61	VGQ6885	BOTTOM COVER	1						
62	VKA0340	GLIP DUSTPROOF RUBBER	1						
63	VGU9255	HOOD FIX PIECE	1						
64	VGQ6882	LENS HOOD	1						
65	VMP7605	LENS HOOD WINDOW	1						
66	VGQ7077	MECHA DUSTPROOF COVER	1						
67	VMT1348	CASSETTE COVER GASKET (U)	1						
68	VXP2212	FOCUS RING ASSY	1						
69	VDW0855	FIX RING ASSY	1						
70	VJF1472	FLEX. HOLDER	1						
71	VXW0563	CAMERA LENS ASSY	1						
72	VGQ7078	RUBBER CAP	1						
73	VEE0T92	INT MIC	1						
74	VDW0854	ZOOM RING	1						


HANDLE & EVF PARTS ASSEMBLY

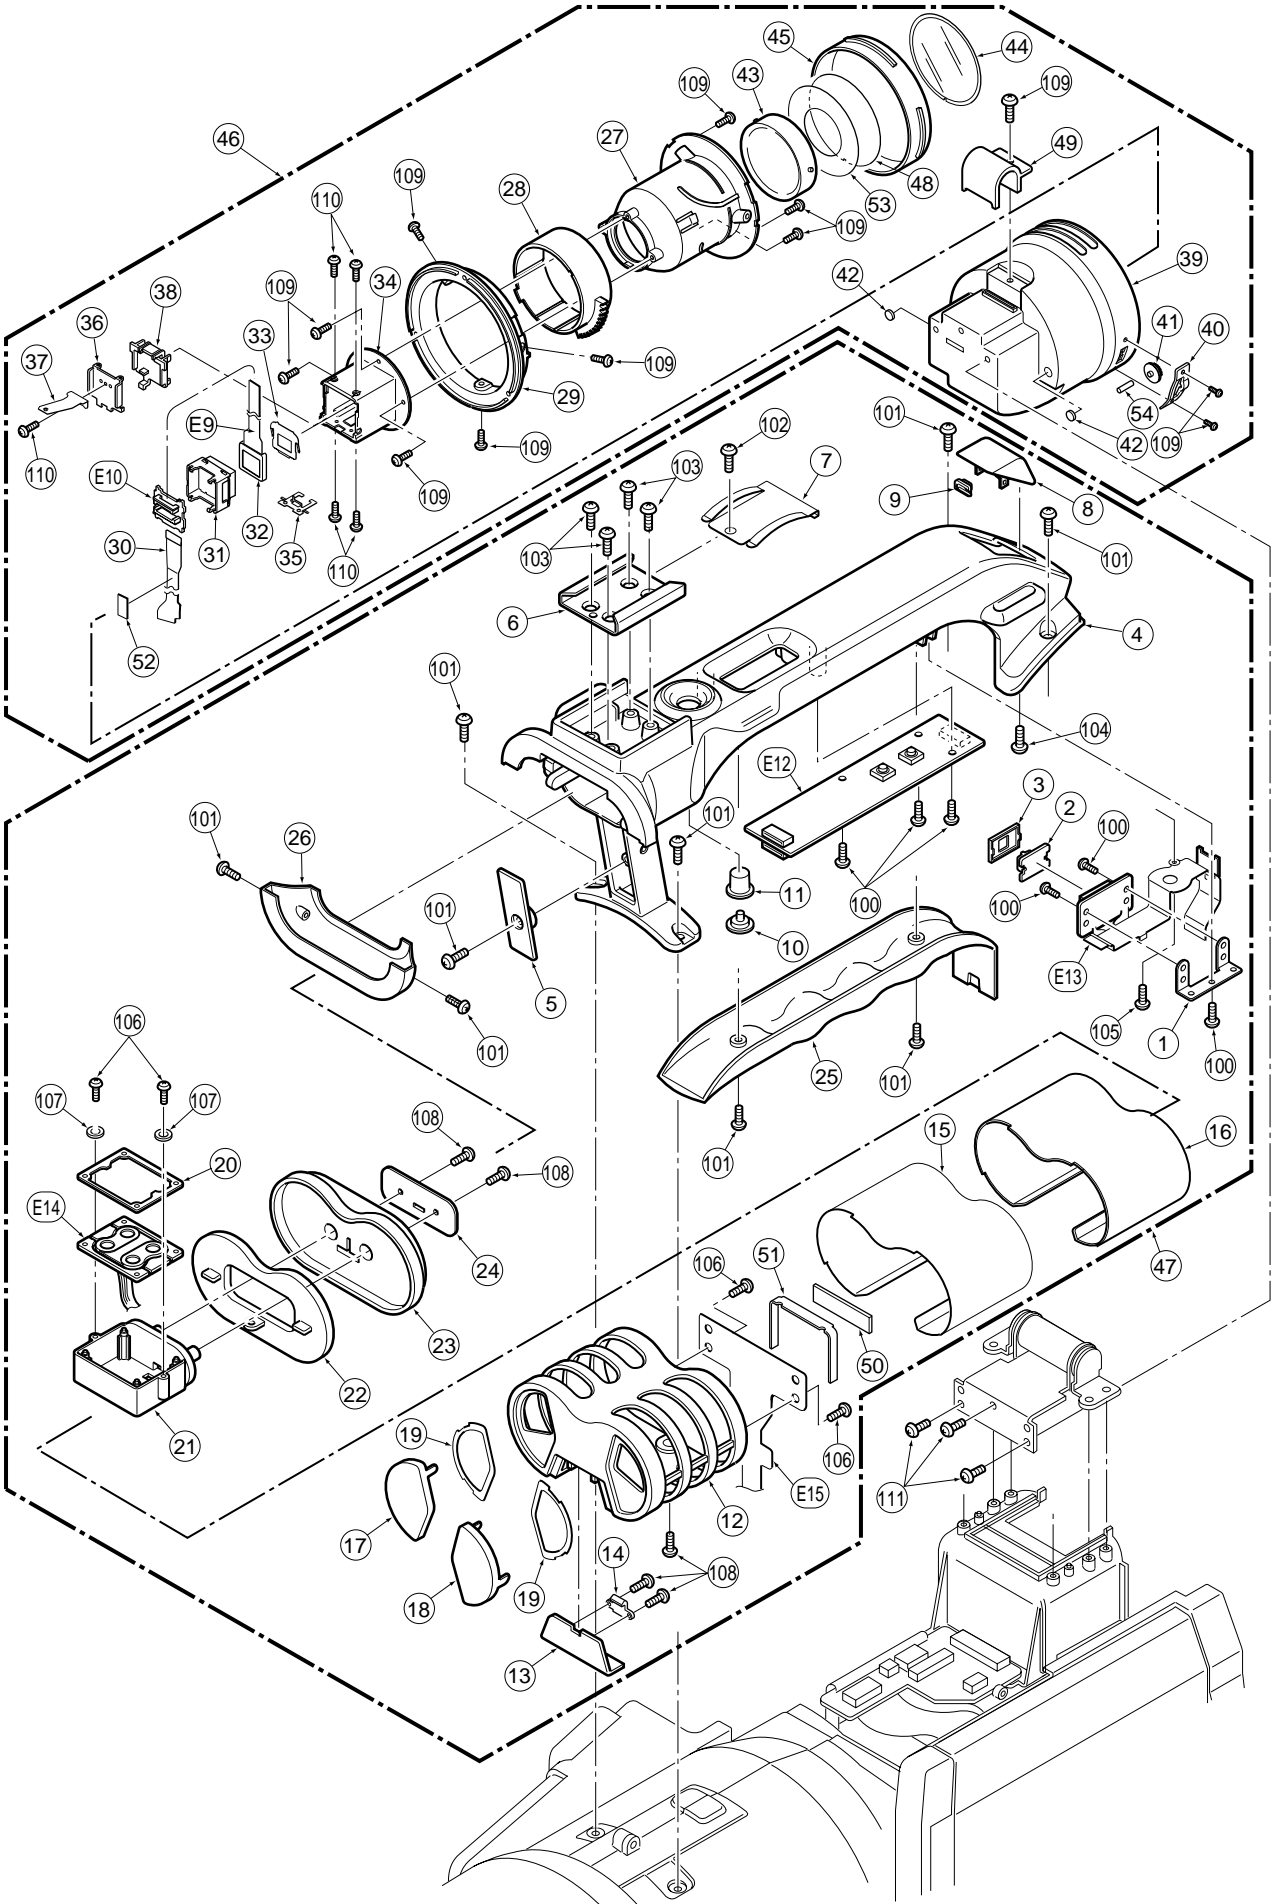

HANDLE & EVF PARTS ASSEMBLY

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
1	VMP7328	HANDLE SLIDE ANGLE	1		E12	VEP06E95A	HANDLE 1 C.B.A.	1	
2	VGU9214	SLIDE KNOB	1		E13	VEP06F04A	HANDLE 2 C.B.A.	1	
3	VMG1460	SLIDE SW RUBBER COVER	1		E14	VEP04828A	MIC C.B.A.	1	
4	VKH0410	HANDLE	1		E15	VEP06E94A	F TALLY C.B.A.	1	
5	VGQ6888	HANDLE FRONT COVER	1						
6	VJF1421	SHU	1						
7	VMC1697	SPRING	1						
8	VKW3080	REAR TALLY COVER	1						
9	VGL1011	TALLY LIGHT	1						
10	VMG1479	HANDLE S/S BUTTON RUBBER	1						
11	VGU9207	HANDLE S/S BUTTON	1						
12	VGQ6872	MIC CASE	1						
13	VKW3079	FRONT TALLY COVER	1						
14	VKW3081	FRONT TALLY LIGHT	1						
15	VKN0168	MIC NET (SIDE)	1						
16	VGQ6876	FRONT PUNCHING PANEL 1	1						
17	VGQ6921	FRONT PUNCHING PANEL 2	1						
18	VGQ6877	FRONT PUNCHING PANEL	1						
19	VKN0167	MIC NET (FRONT)	2						
20	VGQ6352	DUMPER HOLDER PIECE	1						
21	VGQ6891	MIC P.C.B. HOLDER	1						
22	VGQ6878	MIC RUBBER FIX PIECE	1						
23	VMG1459	MIC RUBBER HOLDER	1						
24	VMP7329	MIC HOLDER ANGLE	1						
25	VGQ6873	HANDLE COVER	1						
26	VGQ6887	MIC CASE (LOWER)	1						
27	VDK0173	HELICOID	1						
28	VGQ6879	DIOPTER GEAR	1						
29	VGQ6890	EVF FILTER HOLDER	1						
30	VWJ1586	EVF FPC	1						
31	VMX2967	PB SPACER	1						
32	L5BDDXE00001	ACTIVE MATRIX LCD PANEL	1						
33	VGQ7088	LCD MASK	1						
34	VGQ6926	LCD CASE	1						
35	VMC1612	EVF EARTH SPRING	1						
36	VMP7360	EVF COVER ANGLE	1						
37	VMC1808	EVF EARTH SPRING	1						
38	VGQ6927	EVF COVER	1						
39	VGQ6799	EVF CASE	1						
40	VGQ3855	DIOPTER ADJUST BRACKET	1						
41	VGU6944	EYE SIGHT ADJ. DIAL	1						
42	VMG1286	CUSHION RUBBER	2						
43	VXW0567	EVF LENS ASS'Y	1						
44	VDL1348	EVF FILTER	1						
45	VGQ6889	EVF EYE CAP HOLDER	1						
46	VEQ3317	EVF ASS'Y	1						
47	VYH0300	HANDLE ASS'Y	1						
48	VGQ7120	FILTER	1						
49	VGQ6892	EVF HINGE COVER	1						
50	VGQ0957	MIC SHADING SHEET	1						
51	VMZ3344	INSULATION PLATE	1						
52	VMZ3361	SHEET	1						
53	VMX3293	SHEET	1						
54	VMS7303	EYE SIGHT KNOB SHAFT	1						
100	XQN2+C4	SCREW	6						
101	XQN2+B4FZ	SCREW	9						
102	XSN2+4FC	SCREW	1						
103	XSS2+4FZ	SCREW	4						
104	XQN2+BJ3FZ	SCREW	1						
105	XYN2+J4	SCREW	1						
106	XQN2+BJ4	SCREW	4						
107	XWG2	WASHER	2						
108	XQN2+BJ5FZ	SCREW	5						
109	XQN2+BJ4FZ	SCREW	12						
110	XQN16+C25FZ	SCREW	5						
111	XQN2+CJ6FZ	SCREW	3						
E9	VEP28272B	EVF A C.B.A.	1						
E10	VEP28275B	EVF B C.B.A.	1						


LCD PARTS ASSEMBLY

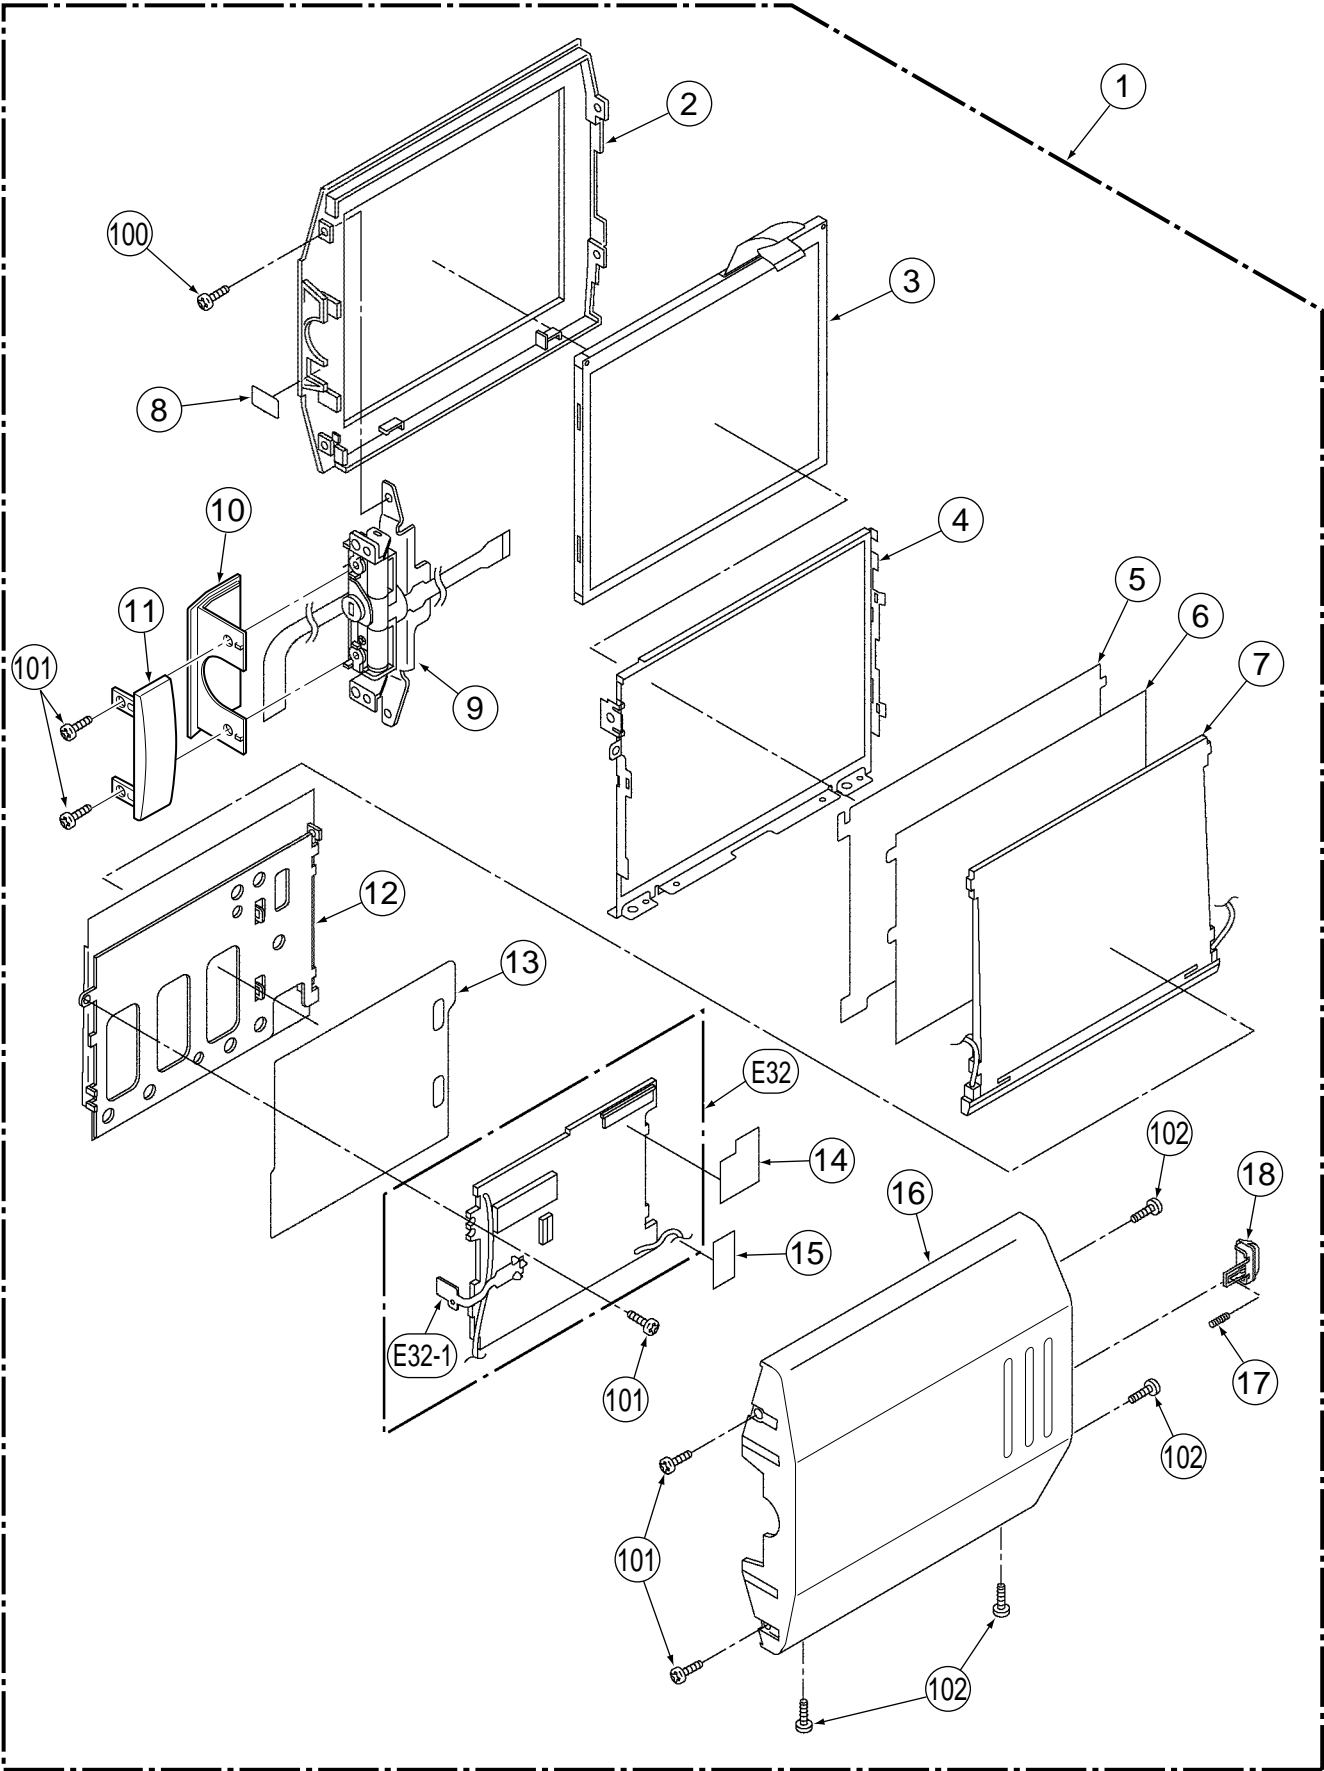


LCD PARTS ASSEMBLY

[illegible]

PACKING PARTS ASSEMBLY

Components identified with the mark  have the special characteristics for safety. When replacing any of these components, use only the same type.

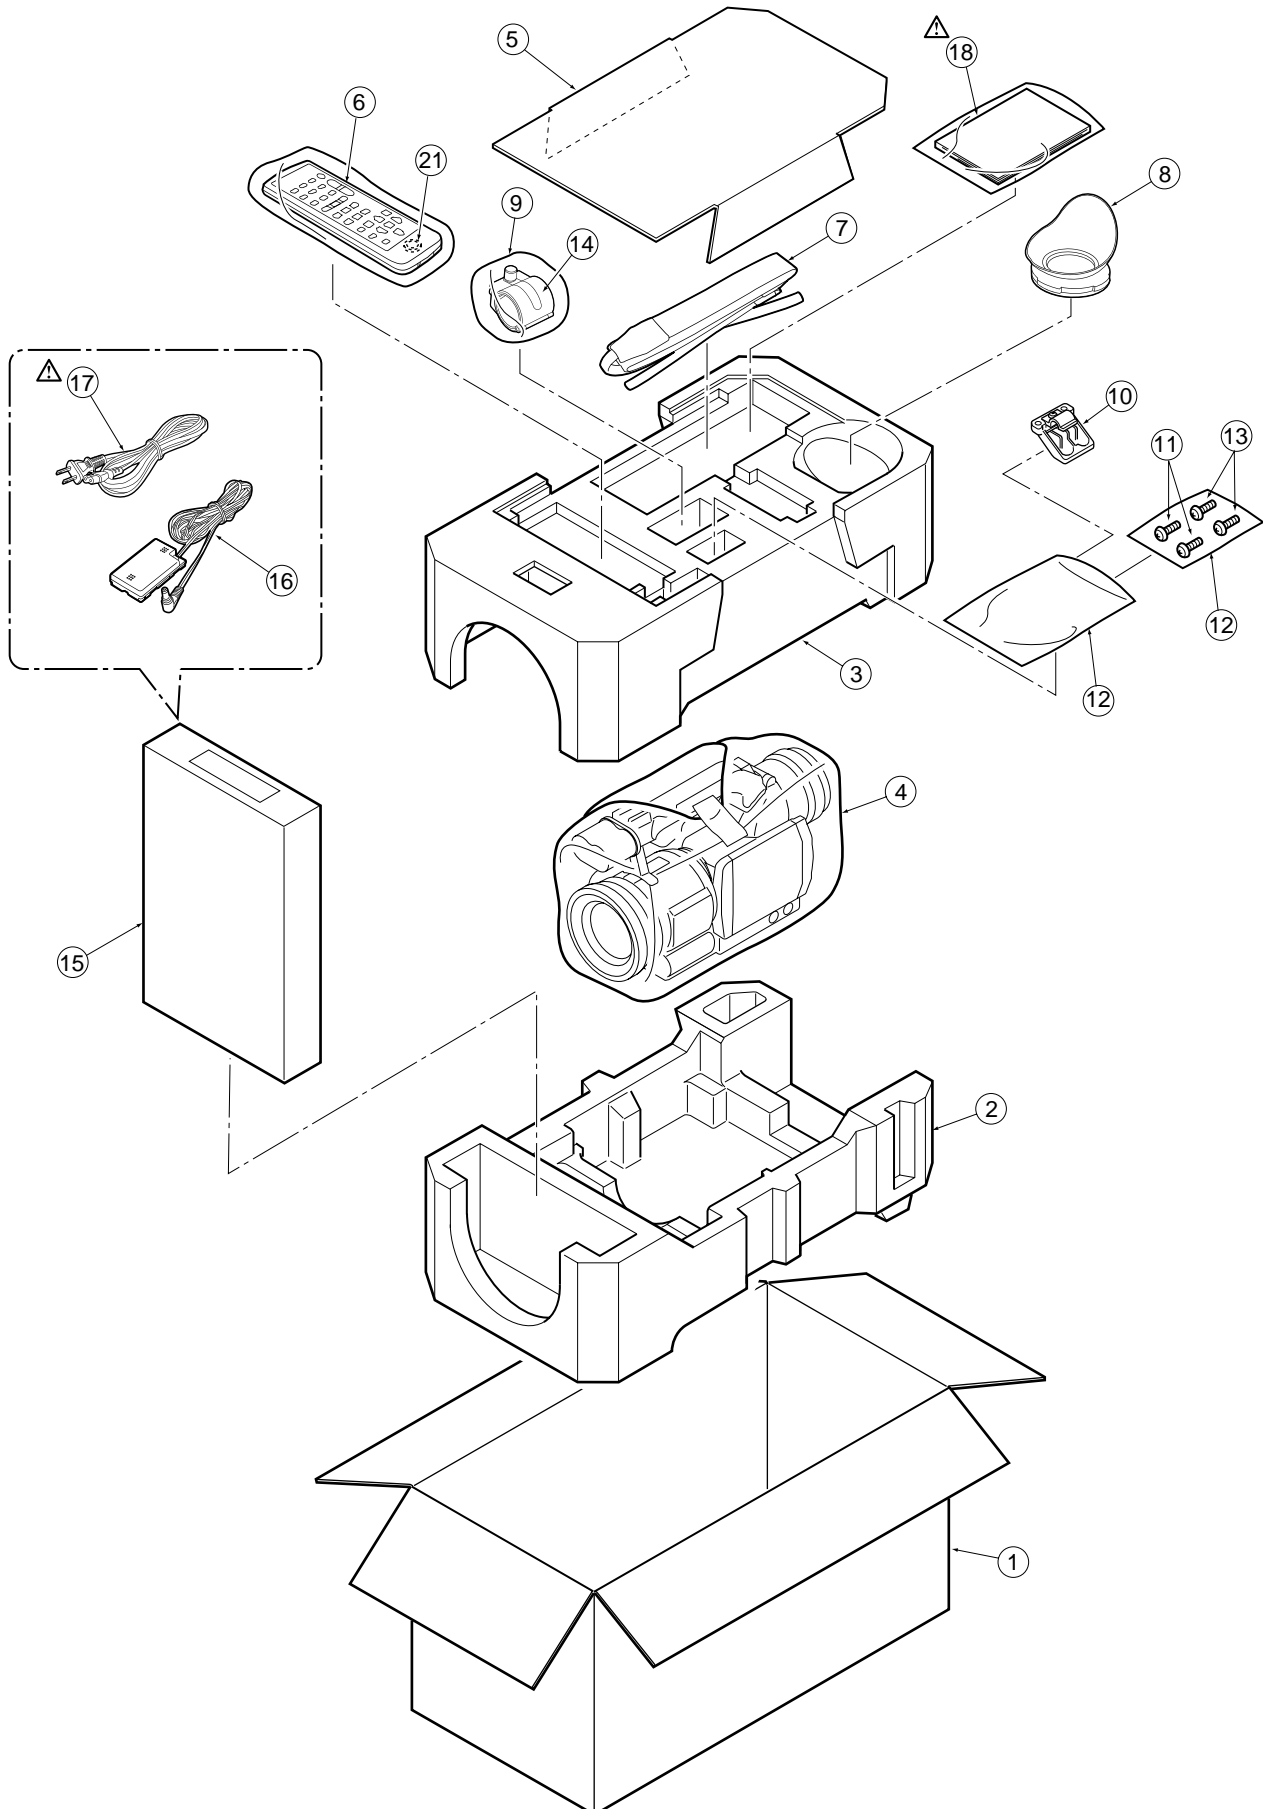

PRT-14

PACKING PARTS ASSEMBLY

Components identified with the mark have the special characteristics for safety. When replacing any of these components, use only the same type.

[illegible]