


After started P1 WITH A PLUGGED-IN USB-Mouse and closed PFAFF-Panel-Software (cross right above), there is this screen. Now click the network symbol (green arrow):



then click details:

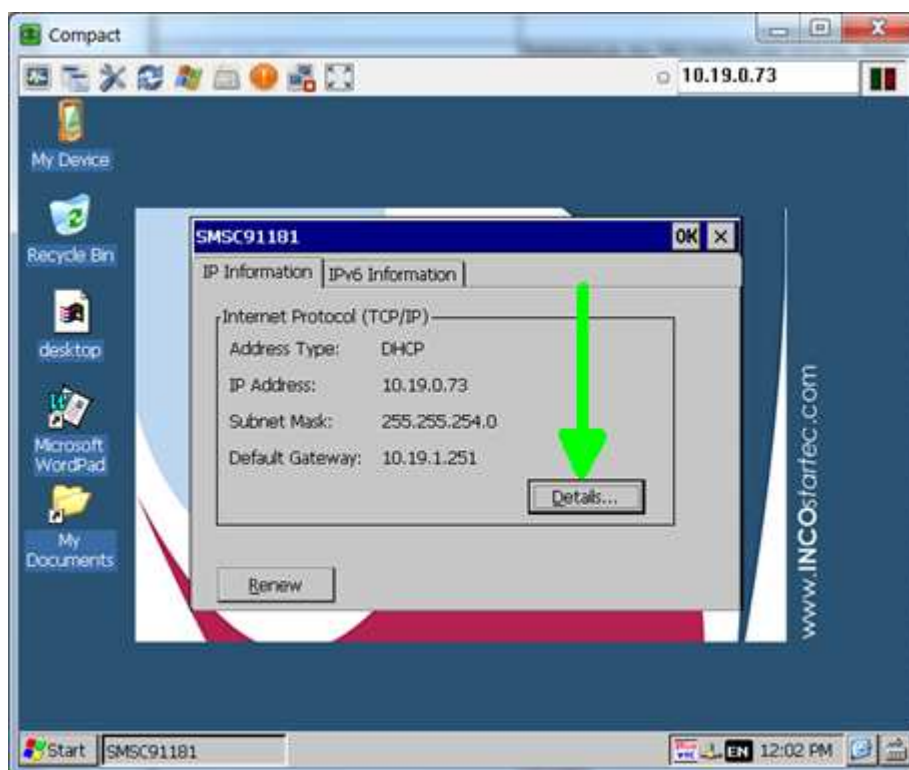

After that you can read the physical address of the P1 panel: (MAC-adress)

