



USER MANUAL


**Klipsch**<sup>®</sup>  
REFERENCE  
PREMIERE

HD WIRELESS



## REFERENCE PREMIERE | HD WIRELESS


---

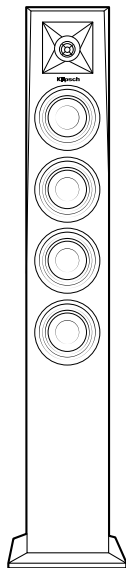


**RP-440WF**




**RP-140WM**

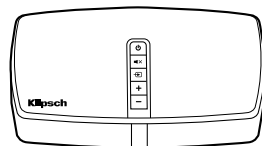

**HD Control Center  
(RP-HUB1)**




**RP-440WC**

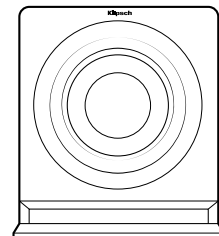



**RP-110WSW**

## HD CONTROL CENTER

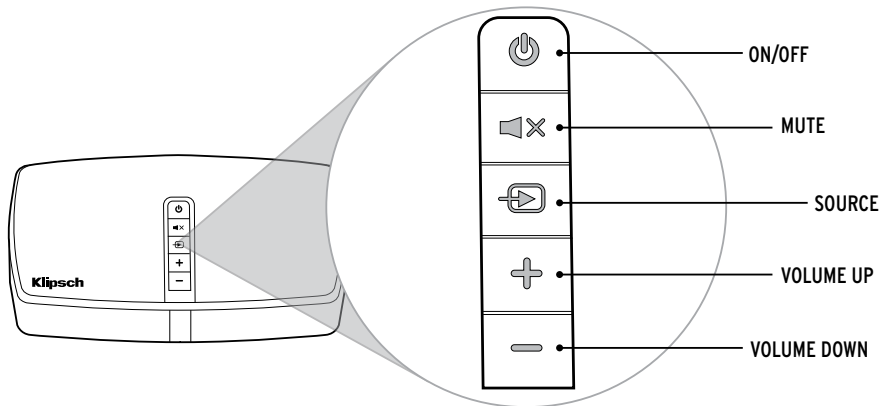


 <b>ON /OFF</b> Sous tension / Hors tension Encendido / Apagado Ein / Aus Acceso / Spento Ligar / Desligar 开/关	 <b>MUTE</b> Sourdine Silenciador Stummschaltung Disattivazione audio Desativar áudio 静音	 <b>SOURCE</b> Source Fuente Quelle Sorgente Fonte 輸入源的切换	 <b>VOLUME UP</b> Volume haut Subida de volumen Lauter Aumento volume Aumentar o volume 音量增大	 <b>VOLUME DOWN</b> Volume bas Bajada de volumen Leiser Riduzione volume Diminuir o volume 音量减小
---	---	--	---	--

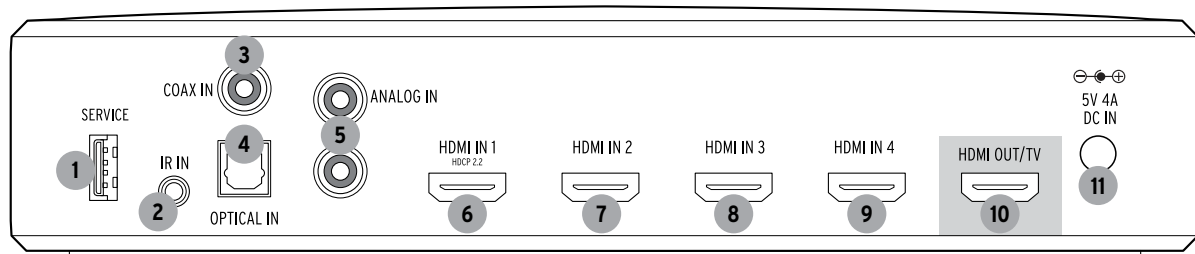

<div>1</div> <div>Service Port</div> <div>Port Service Puerto Servicio Service-Anschluss Porta Servizio Porta Serviço 服务 端口</div>	<div>2</div> <div>3.5mm IR Input</div> <div>Entrée IR 3,5 mm Entrada de infrarrojo (IR) de 3.5 mm 3,5-mm-IR-Eingang Ingresso IR da 3,5 mm Entrada de infravermelho de 3.5 mm 3.5 mm 红外线输入</div>	<div>3</div> <div>Coaxial Input</div> <div>Entrée coaxiale Entrada coaxial Koaxial-Eingang Ingresso coassiale Entrada coaxial 数字/同轴输入</div>	<div>4</div> <div>Optical Input</div> <div>Connexion Optique Conexión Óptica Optische verbindung Connessione Ottica Conexão Ótica 数字光纤连接</div>	<div>5</div> <div>RCA Analog Inputs</div> <div>Connexion analogique fiche RCA Conexión analógica de RCA Analogverbindung Connessione analogica da jack RCA Conexão Analógica de RCA RCA 模拟连接</div>	
<div>6</div> <div>HDMI Input 1 (HDMI 2.0 and HDCP 2.2 Compliant)</div> <div>Entrée HDMI 1 Entrada HDMI 1 HDMI-Eingang 1 Ingresso 1 HDMI Entrada HDMI 1 HDMI 输入 1</div>	<div>7</div> <div>HDMI Input 2</div> <div>Entrée HDMI 2 Entrada HDMI 2 HDMI-Eingang 2 Ingresso 2 HDMI Entrada HDMI 2 HDMI 输入 2</div>	<div>8</div> <div>HDMI Input 3</div> <div>Entrée HDMI 3 Entrada HDMI 3 HDMI-Eingang 3 Ingresso 3 HDMI Entrada HDMI 3 HDMI 输入 3</div>	<div>9</div> <div>HDMI Input 4</div> <div>Entrée HDMI 4 Entrada HDMI 4 HDMI-Eingang 4 Ingresso 4 HDMI Entrada HDMI 4 HDMI 输入 4</div>	<div>10</div> <div>HDMI OUT / TV</div> <div>Sortie HDMI / TV Salida HDMI / TV HDMI-Ausgang / TV Produzione HDMI / TV Saída HDMI / TV HDMI 产出</div>	<div>11</div> <div>Power Input DC 5V</div> <div> Prise d'alimentation Entrada de alimentación Netzanschluss Connettore di alimentazione Entrada de alimentação elétrica 电源输入口</div>

# HD CONTROL CENTER

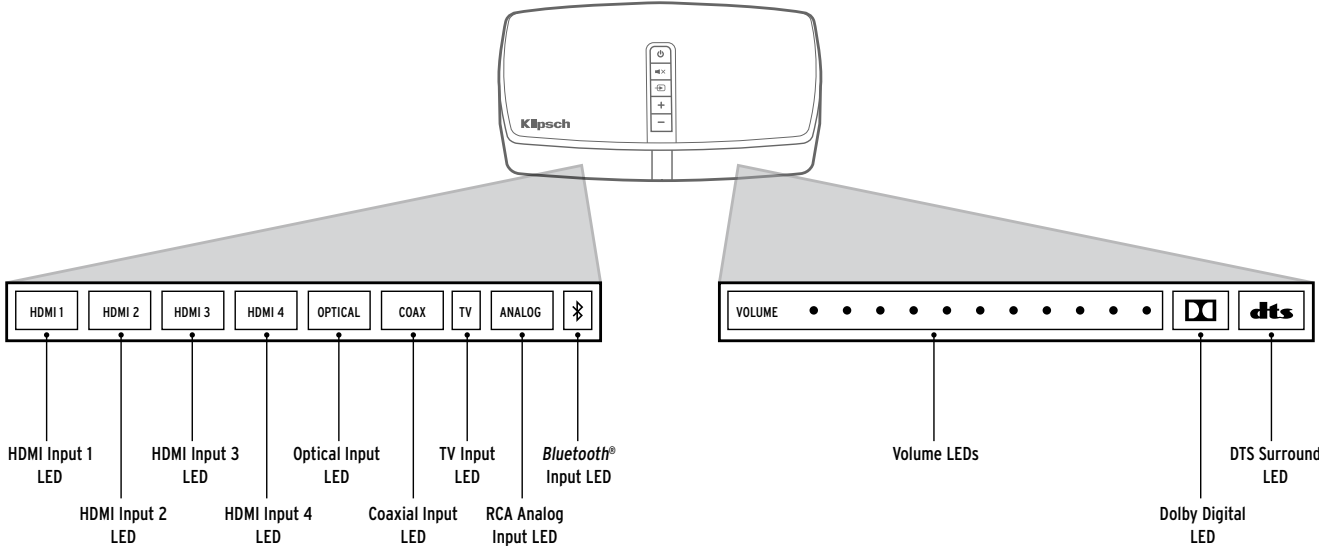


<b>HDMI Input 1 LED</b> DEL de l'entrée HDMI 1 Indicador LED 1 de entrada de HDMI HDMI-Eingang 1 LED LED ingresso 1 HDMI LED da entrada HDMI 1 HDMI 输入 1 LED 灯	<b>HDMI Input 2 LED</b> DEL de l'entrée HDMI 2 Indicador LED 2 de entrada de HDMI HDMI-Eingang 2 LED LED ingresso 2 HDMI LED da entrada HDMI 2 HDMI 输入 2 LED 灯	<b>HDMI Input 3 LED</b> DEL de l'entrée HDMI 3 Indicador LED 3 de entrada de HDMI HDMI-Eingang 3 LED LED ingresso 3 HDMI LED da entrada HDMI 3 HDMI 输入 3 LED 灯	<b>HDMI Input 4 LED</b> DEL de l'entrée HDMI 4 Indicador LED 4 de entrada de HDMI HDMI-Eingang 4 LED LED ingresso 4 HDMI LED da entrada HDMI 4 HDMI 输入 4 LED 灯
--	--	--	--

<b>TV Input LED</b> DEL de l'entrée TV Indicador LED de entrada de TV TV-Eingang LED LED ingresso TV LED da entrada de TV TV 输入 LED 灯	<b>RCA Analog Input LED</b> DEL de l'entrée RCA analogique Indicador LED de entrada analógica RCA RCA-Analogeingang LED LED ingresso analogico RCA LED da entrada analógica RCA RCA 模拟输入 LED 灯	<b>Bluetooth® LED</b> DEL Bluetooth® Indicador LED de Bluetooth® Bluetooth® LED LED Bluetooth® LED do Bluetooth® 蓝牙® LED 灯	<b>Optical Input LED</b> DEL de l'entrée optique Indicador LED de entrada óptica Optischer Eingang LED LED ingresso ottico LED da entrada ótica 数字/光学输入 LED 灯	<b>Coaxial Input LED</b> DEL de l'entrée coaxiale Indicador LED de entrada coaxial Koaxial-Eingang LED LED ingresso coassiale LED da entrada coaxial 数字/同轴输入 LED 灯
---	--	--	---	--

<b>Volume LEDs</b> DEL de volume Indicadores LED de volumen Lautstärke-LEDs LED volume LEDs do volume 音量 LED 灯	<b>Dolby Digital LED</b> DEL Dolby Digital Indicador LED de Dolby Digital Dolby-Digital-LED LED segnale Dolby Digital LED Dolby Digital 杜比数字 LED 灯	<b>DTS Surround LED</b> DEL DTS Indicador LED de DTS DTS-LED LED DTS LED DTS DTS LED 灯
--	--	--

# SETUP

INSTALLATION • CONFIGURACIÓN • INSTALLATION • APPONTAMENTO • INSTALAÇÃO • 设置

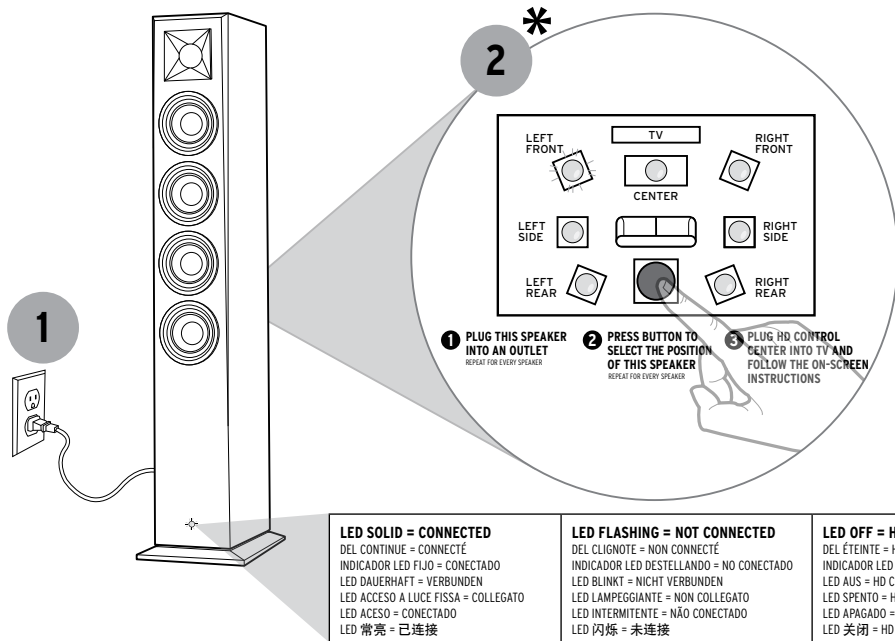

## REPEAT FOR EVERY SPEAKER

RÉPÉTEZ POUR CHAQUE HAUT-PARLEUR  
REPETIR PARA CADA ALTAVOZ  
FÜR JEDEN LAUTSPRECHER WIEDERHOLEN  
RIPETERE PER OGNI ALTOPARLANTE  
REPETIR PARA CADA CAIXA ACÚSTICA  
对于每只音箱，都重复此步骤。

\* **Klipsch Reference Premiere HD Wireless Subwoofers and some other WiSA certified Klipsch speakers may not have a Smart Speaker Selector.**

Les haut-parleurs d'extrêmes graves sans fil HD Klipsch Reference Premiere et certains autres haut-parleurs Klipsch certifiés WiSA peuvent ne pas disposer d'un sélecteur d'emplacement.

Es posible que los subwoofers inalámbricos de alta definición Reference Premiere de Klipsch y algunos otros altavoces Klipsch con certificación WiSA no tengan selector de ubicación.


Drahtlose Klipsch Reference Premiere HD Subwoofer und einige andere WiSA-zertifizierte Klipsch-Lautsprecher haben eventuell keine Standortwahltafel.

Os subwoofers sem fio Klipsch Reference Premiere HD e algumas outras caixas acústicas Klipsch com certificação WiSA não têm seletor de localização.

I subwoofer wireless Klipsch Reference Premiere HD e alcuni altri modelli di altoparlanti Klipsch con certificazione WiSA potrebbero non essere dotati di un selettore della posizione.


Klipsch Reference Premiere 系列高清晰度 (HD) 无线低音炮和一些其他通过 WiSA 认证的 Klipsch 音箱可能并不配备位置选择器。



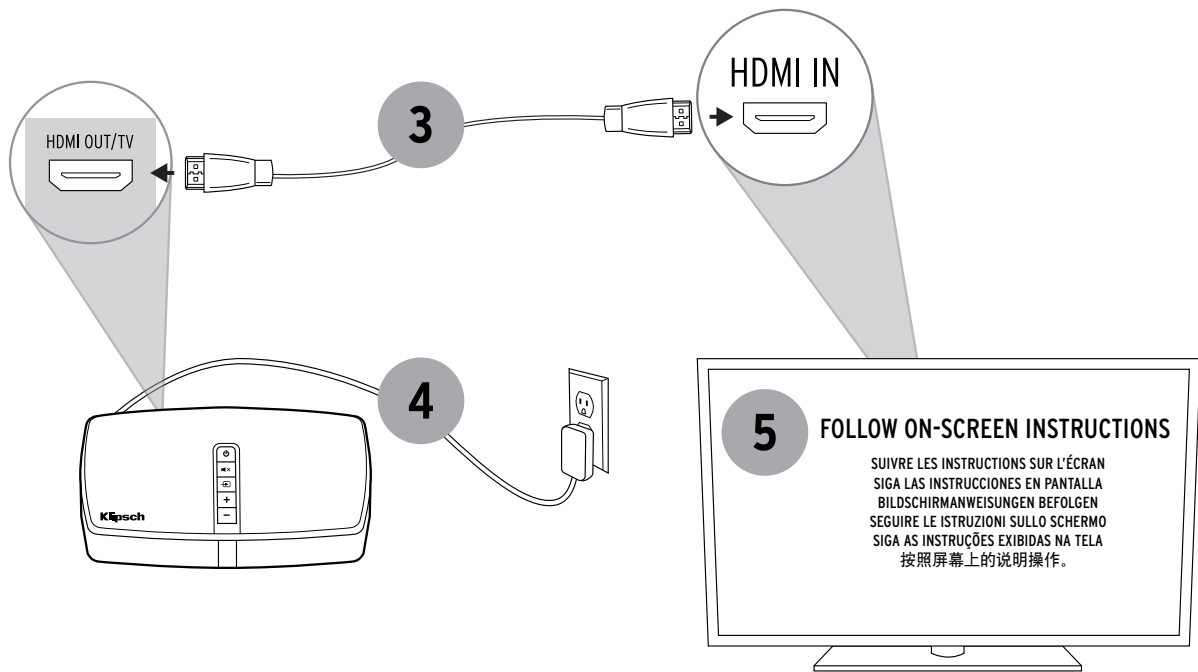

# REMOTE

TÉLÉCOMMANDE • CONTROL REMOTO • FERNBEDIENUNG • TELECOMANDO • CONTROLE REMOTO • 遥控器

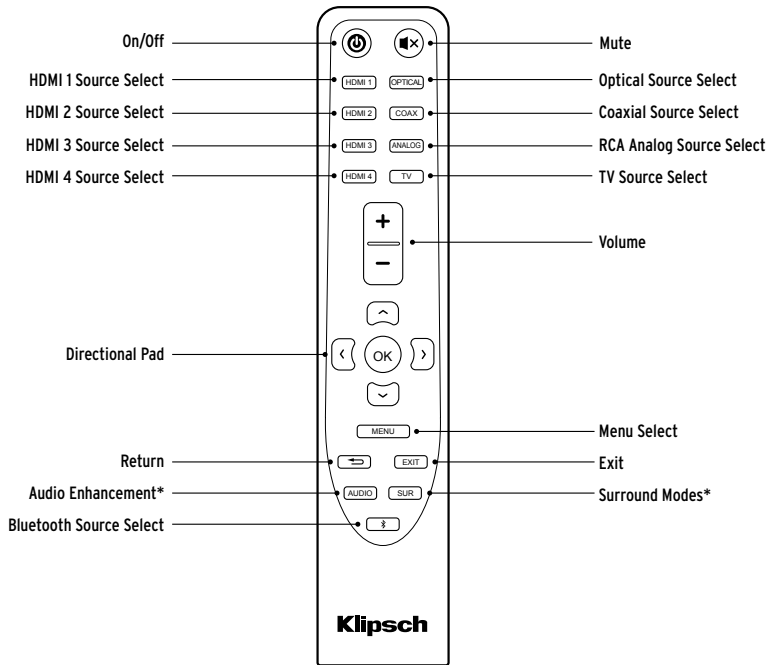

**\* To learn more about Sound Modes, EQ Adjustments, and Surround Effect Modes please see the extended manual at [Klipsch.com/RP-HD-WIRELESS-MANUAL](https://www.klipsch.com/RP-HD-WIRELESS-MANUAL)**

Pour plus d'information sur les modes sonores, les réglages de l'égaliseur et les modes des effets ambiophoniques, veuillez consulter le manuel détaillé à [Klipsch.com/RP-HD-WIRELESS-MANUAL](https://www.klipsch.com/RP-HD-WIRELESS-MANUAL)

Hay más información sobre modalidades de sonido, ajustes de equalización y modalidades de efecto surround en el manual extenso que se encuentra en [Klipsch.com/RP-HD-WIRELESS-MANUAL](https://www.klipsch.com/RP-HD-WIRELESS-MANUAL)

Um mehr über Sound-Modi, EQ-Einstellungen und Surroundeffekt-Modi zu erfahren, lesen Sie bitte das erweiterte Handbuch auf [Klipsch.com/RP-HD-WIRELESS-MANUAL](https://www.klipsch.com/RP-HD-WIRELESS-MANUAL)

Per maggiori informazioni sulle modalità audio, regolazioni dell'equalizzatore e modalità degli effetti surround, consultare il manuale completo su [Klipsch.com/RP-HD-WIRELESS-MANUAL](https://www.klipsch.com/RP-HD-WIRELESS-MANUAL)

Para saber mais sobre modos de áudio, ajustes de EQ e modos de efeitos surround, consulte o manual completo em [Klipsch.com/RP-HD-WIRELESS-MANUAL](https://www.klipsch.com/RP-HD-WIRELESS-MANUAL)

欲了解更多有关“声音模式”、“均衡器调整”及“环绕声音效”之信息，请参阅 [Klipsch.com/RP-HD-WIRELESS-MANUAL](https://www.klipsch.com/RP-HD-WIRELESS-MANUAL) 上的扩展手册。

<b>On / Off</b> Sous tensio / Hors tension Encendido / Apagado Ein / Aus Acceso / Spento Ligar / Desligar 开/关	<b>Mute</b> Sourdine Silenciador Stummuschaltung Disattivazione audio Desativar áudio 静音	<b>HDMI 1 Source Select</b> Sélection de la source HDMI 1 Selección de fuente HDMI 1 HDMI 1 Quellenwahl Selezione segnale HDMI 1 Seleção de fonte HDMI 1 HDMI 1 源选择	<b>HDMI 2 Source Select</b> Sélection de la source HDMI 2 Selección de fuente HDMI 2 HDMI 2 Quellenwahl Selezione segnale HDMI 2 Seleção de fonte HDMI 2 HDMI 2 源选择	<b>HDMI 3 Source Select</b> Sélection de la source HDMI 3 Selección de fuente HDMI 3 HDMI 3 Quellenwahl Selezione segnale HDMI 3 Seleção de fonte HDMI 3 HDMI 3 源选择	<b>HDMI 4 Source Select</b> Sélection de la source HDMI 4 Selección de fuente HDMI 4 HDMI 4 Quellenwahl Selezione segnale HDMI 4 Seleção de fonte HDMI 4 HDMI 4 源选择
---	--	---	---	---	---

<b>Optical Source Select</b> Sélection de la source optique Selección de fuente óptica Optisch Quellenwahl Selezione segnale ottico Seleção de fonte ótica 数字/光学源选择	<b>Coaxial Source Select</b> Sélection de la source coaxiale Selección de fuente coaxial Koaxial Quellenwahl Selezione segnale coassiale Seleção de fonte coaxial 数字/同轴源选择	<b>RCA Analog Source Select</b> Sélection de la source RCA analogique Selección de fuente analógica RCA RCA-Analog-Quellenwahl Selezione segnale analogico RCA Seleção de fonte analógica RCA RCA 模拟源选择	<b>TV Source Select</b> Sélection de la source TV Selección de fuente de TV TV Quellenwahl Selezione segnale TV Seleção de fonte de TV TV 源选择	<b>Volume</b> Volume Volume Lautstärke Volume Volume 音量
---	--	---	---	---

<b>Directional Pad</b> Clavier directionnel Teclado direccional Richtungstasten Tastierino frecce Botões direcionais 定向垫	<b>Menu Select</b> Sélection du menu Selección de menú Menüauswahl Selezione menu Seleção do menu 菜单选择	<b>Return</b> Retour Retorno Zurück Indietro Voltar 返回	<b>Exit</b> Quitter Salida Beenden Uscita Sair 退出	<b>Audio Enhancement</b> Modes sonores et réglages de l'égaliseur Ajuste de modalidades de sonido y equalización Sound-Modi und EQ-Einstellungen Modalità audio e regolazione equalizzatore Modos de áudio e ajuste de EQ 声音模式与均衡器调节	<b>Surround Modes</b> Modes des effets ambiophoniques Modalidades de efectos surround Surroundeffekt-Modi Modalità effetti surround Modos de efeito surround 环绕声音效模式	<b>Bluetooth® Source Select</b> Sélection de la source Bluetooth® Selección de fuente Bluetooth® Bluetooth® Quellenwahl Selezione segnale Bluetooth® Seleção de fonte Bluetooth® 蓝牙®源选择
--	--	--	---	--	--	---

# BLUETOOTH® WIRELESS TECHNOLOGY

TECNOLOGÍA INALÁMBRICA BLUETOOTH® • CONFIGURACIÓN DE TECNOLOGÍA WIRELESS BLUETOOTH® • DRAHTLOSE BLUETOOTH®-TECHNOLOGIE-SETUP • CONFIGURAZIONE TECNOLOGIA WIRELESS BLUETOOTH® • CONFIGURAÇÃO DE TECNOLOGIA SEM FIO BLUETOOTH®  
BLUETOOTH® 蓝牙无线技术

## CONNECT

CONNEXION  
CONEXIÓN  
VERBINDEN  
COLLEGAMENTO  
CONECTAR  
连接


1

### Hold 3 Seconds

Appuyer pendant 3 secondes  
Mantenga oprimido durante 3 segundos  
3 Sekunden gedrückt halten  
Tenere premuto per 3 secondi  
Manter pressionado por 3 segundos  
保持 3 秒



OR  
OU  
O BIEN  
ODER  
OPPURE  
OU  
或

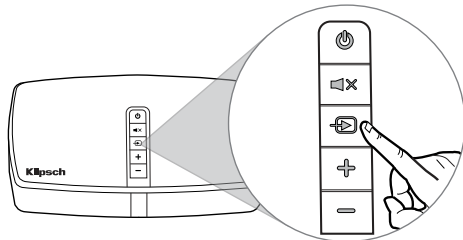


2


### Flashing

#### Flashing


Clignotant  
Destello  
Blinkt  
Lampeggiante  
Intermittente  
闪烁

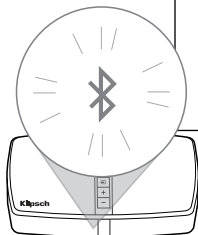

3

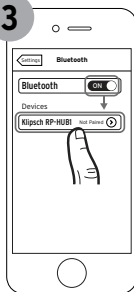

4

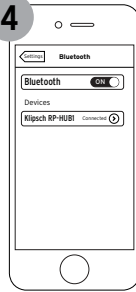


5

### Solid

#### Solid

Continu  
Continuo  
Dauerhaft  
Luce fissa  
Constante  
纯

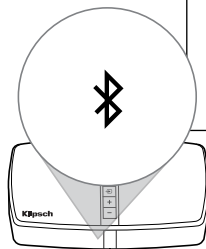





Example only. Your device may differ.

À titre d'exemple seulement. Votre appareil peut être différent. • Este es solo un ejemplo. Es posible que su dispositivo sea diferente. • Nur als Beispiel. Ihr Gerät kann anders aussehen • Solo a titolo esemplificativo. Lo specifico dispositivo può essere diverso. •

Apenas para exemplo. O dispositivo pode ser diferente. • 仅为示例。实际设备可能有所不同

# CARE AND CLEANING

ENTRETIEN ET NETTOYAGE • CUIDADO Y LIMPIEZA • PFLEGE UND REINIGUNG • CURA E PULIZIA • CUIDADOS E LIMPEZA • 保养与清洁

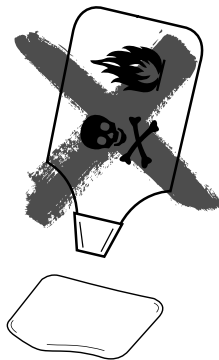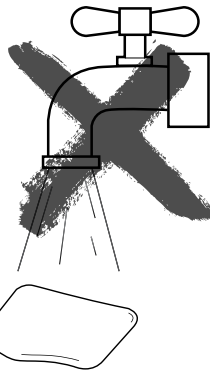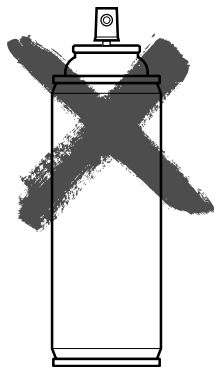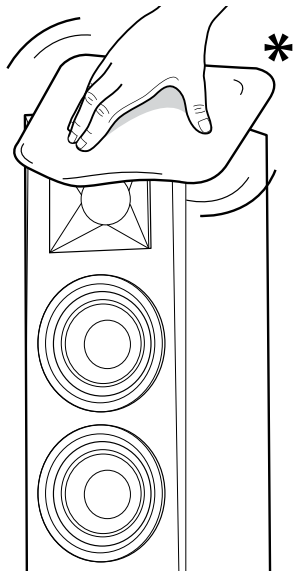

**\* USE MICROFIBER CLOTHS ONLY**

\*Utilisez des chiffons en microfibras seulement

\*Use solamente paños de microfibra

\*Nur Mikrofasertücher verwenden

\*Usare solo panni in microfibra

\*Use somente tecidos de microfibra

\*仅限使用超细纤维布



**For more in-depth information and troubleshooting instructions visit [KLIPSCH.COM/RP-HD-WIRELESS](https://www.klipsch.com/RP-HD-WIRELESS)**

Pour plus d'informations et des instructions de dépannage détaillées, consultez [Klipsch.com/RP-HD-WIRELESS](https://www.klipsch.com/RP-HD-WIRELESS)

Hay información más detallada e instrucciones de detección y reparación de averías en [Klipsch.com/RP-HD-WIRELESS](https://www.klipsch.com/RP-HD-WIRELESS)

Detailliertere Anweisungen und Hinweise zur Problembehebung finden Sie unter [Klipsch.com/RP-HD-WIRELESS](https://www.klipsch.com/RP-HD-WIRELESS)

Per informazioni più dettagliate e istruzioni per la soluzione dei problemi, visitare [Klipsch.com/RP-HD-WIRELESS](https://www.klipsch.com/RP-HD-WIRELESS)

Para obter informações mais detalhadas e instruções para solucionar problemas, visite o site [Klipsch.com/RP-HD-WIRELESS](https://www.klipsch.com/RP-HD-WIRELESS)

欲了解更详细的信息和故障排除说明，请访问 [Klipsch.com/RP-HD-WIRELESS](https://www.klipsch.com/RP-HD-WIRELESS)。



# Klipsch®

## KEEPERS OF THE SOUND®

3502 WOODVIEW TRACE, INDIANAPOLIS, IN, USA

KLIPSCH.COM

V20 - 0127

©2016 KLIPSCH GROUP, INC. KLIPSCH, KLIPSCHORN, TRACTRIX AND KEEPERS OF THE SOUND ARE REGISTERED TRADEMARKS OF KLIPSCH, GROUP, INC. A WHOLLY OWNED SUBSIDIARY OF VOXX INTERNATIONAL CORPORATION. THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY BLUETOOTH SIG, INC. AND ANY USE OF SUCH MARKS BY KLIPSCH GROUP, INC. IS UNDER LICENSE. THE APTX™ SOFTWARE IS COPYRIGHT CSR PLC OR ITS GROUP COMPANIES. ALL RIGHTS RESERVED. THE APTX™ MARK IS A REGISTERED TRADEMARK OF CSR PLC OR ONE OF ITS COMPANIES AND MAY BE REGISTERED IN ONE OR MORE JURISDICTIONS. THE TERMS HDMI AND HDMI HIGH-DEFINITION MULTIMEDIA INTERFACE, AND THE HDMI LOGO ARE TRADEMARKS OR REGISTERED TRADEMARKS OF HDMI LICENSING LLC IN THE UNITED STATES AND OTHER COUNTRIES. DOLBY, PRO LOGIC, AND THE DOUBLE-D SYMBOL ARE REGISTERED ARE REGISTERED TRADEMARKS OF DOLBY LABORATORIES. FOR DTS PATENTS, SEE [HTTP://PATENTS.DTS.COM](http://patents.dts.com). MANUFACTURED UNDER LICENSE FROM DTS LICENSING LIMITED. DTS, THE SYMBOL, & DTS AND THE SYMBOL TOGETHER ARE REGISTERED TRADEMARKS, AND DTS DIGITAL SURROUND IS A TRADEMARK OF DTS, INC. © DTS, INC. ALL RIGHTS RESERVED

A close-up, high-angle shot of a Klipsch speaker driver. The central part is a circular, brushed metal dome with a radial pattern, surrounded by a wider, smooth copper-colored ring. This is set within a black, circular frame. The background is a dark, textured surface. The Klipsch logo is visible in the upper right corner.

**Klipsch**

**KEEPERS OF THE SOUND®**