



SS-TTL3VT USB/UART Adapter (TTL level)
<http://www.serialstuff.com/products/USB-to-3.3v-TTL-Header.html>

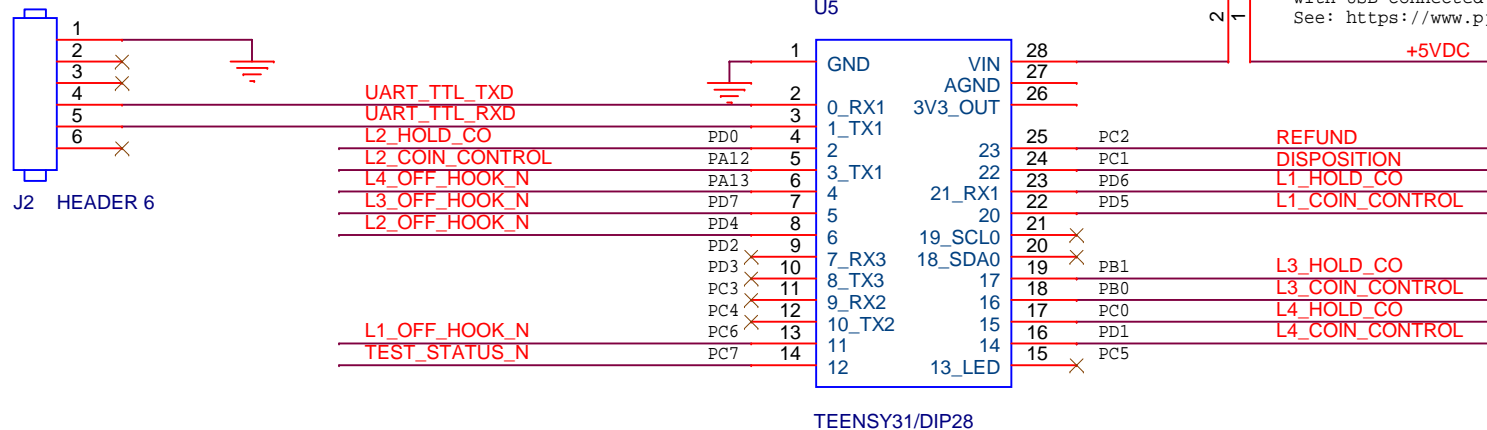

Insert jumper to supply Teensy 3.1 from the on-board power supply.
 Jumper must be removed when Teensy 3.1 is powered via USB.
 Cut jumper on back of Teensy 3.1 module and leave this jumper installed to supply Teensy module from on-board power supply with USB connected.
 See: <https://www.pjrc.com/teensy/pinout.html>

1D/2D Coin Controller for Bell System Payphones		
Title		
Microcontroller		
Size	Document Number	Rev
A	Designed by Howard M. Harte - WZ2Q	1.0
Date:	Sunday, January 04, 2015	Sheet 3 of 6

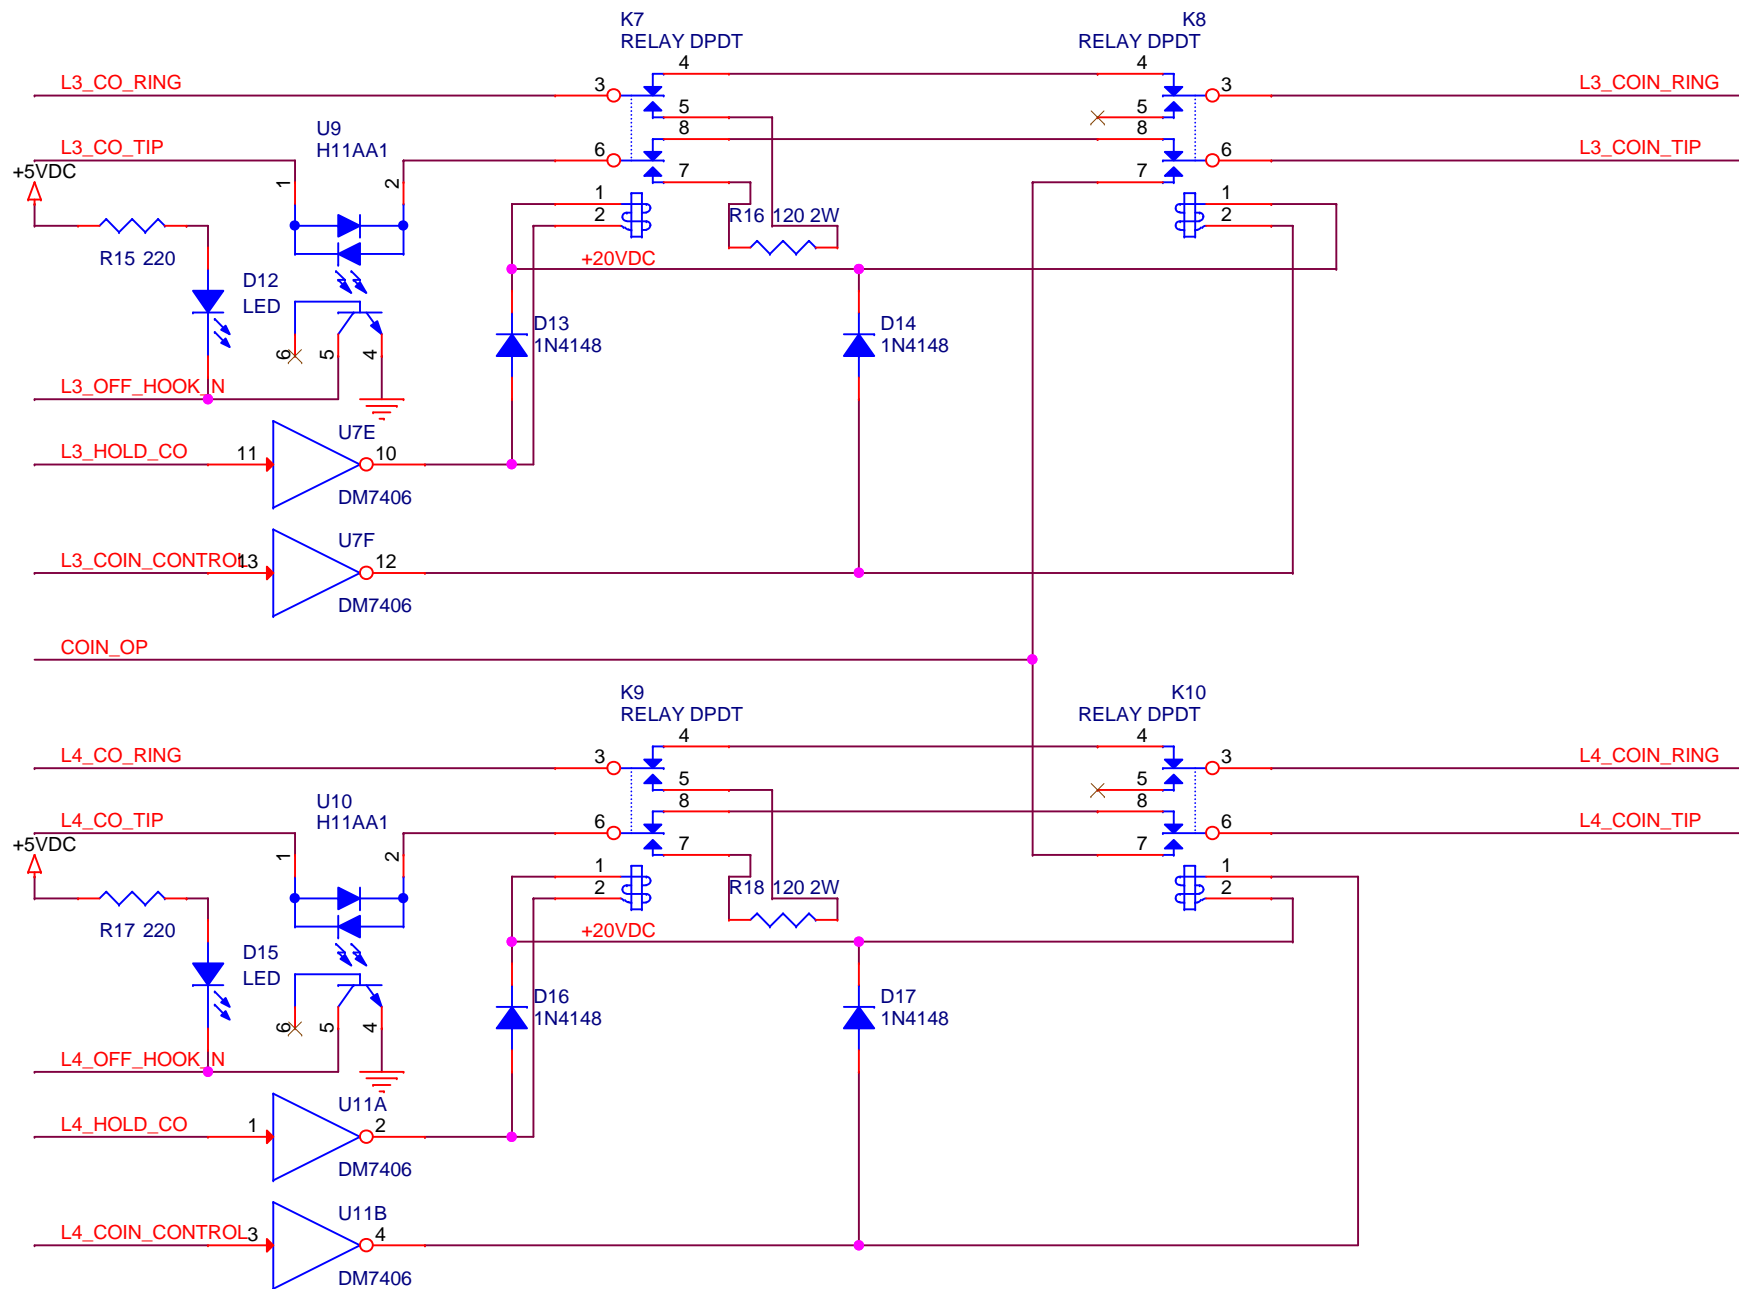

NOTES:

HOLD_CO will hold the CO line and isolate it from the coin controller when operated.
 COIN_CONTROL will select Coin control when operated, normal talk mode when not operated.

1D/2D Coin Controller for Bell System Payphones

Title

Coin Controller - Lines 3, 4

Size

A

Document Number

Designed by Howard M. Harte - WZ2Q

Rev






1.0

Date:

Sunday, January 04, 2015

Sheet

5 of 6

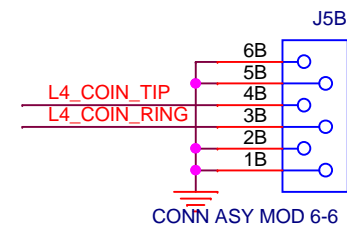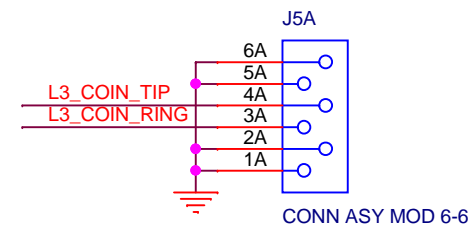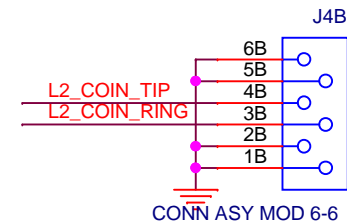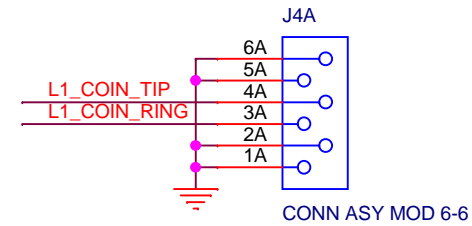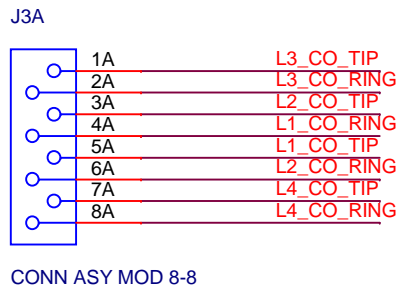

1D/2D Coin Controller for Bell System Payphones		
Title		
Coin Controller - Connectors		
Size	Document Number	Rev
A	Designed by Howard M. Harte - WZ2Q	1.0
Date:	Sunday, January 04, 2015	Sheet 6 of 6