


10

Load Cell Calibration

Load cells measure the weight of the printing cartridges and the waste container. Periodically checking that the weight measurements are accurate ensures optimum use of printing materials, and prevents printer malfunctions and spills. It is recommended that you calibrate the load cells once a month.

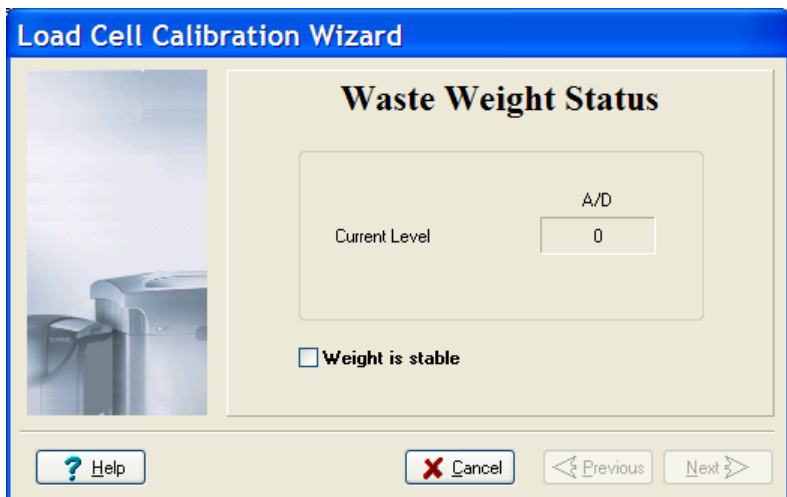

20

Weight Status

Observe the numbers, and wait until the level is relatively stable - within about four (4) units above or below the average level shown. Select **Weight is stable** and click **Next**.