


58mm Omnidirectional wheel Car

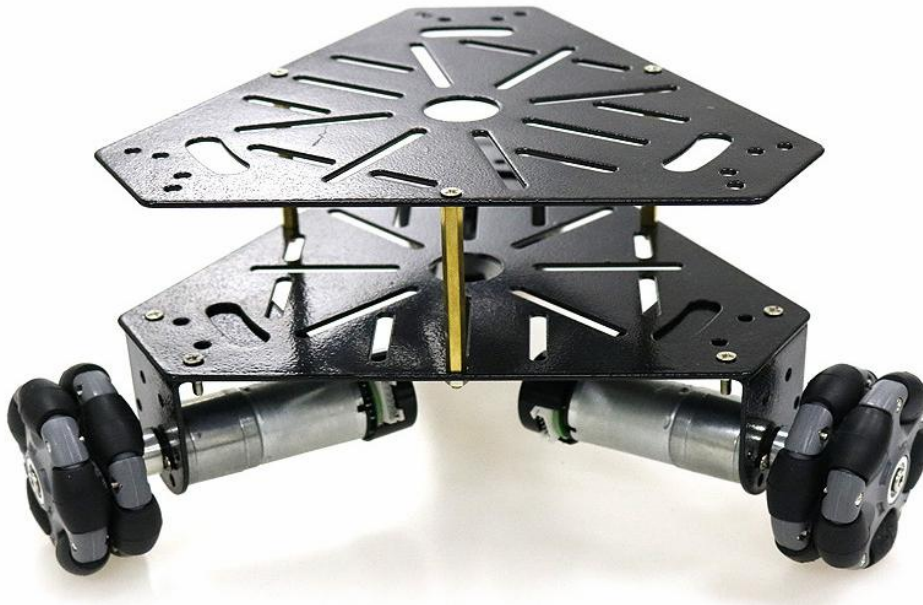

Shipping list:

Name	Quantities	Name	Quantities
Plate	2	Top silk	6
58mm omni wheel	3	M3*50 couplings	3
Motor	3	M3*12mm flat head screws	6
Motor wire	3	M3*6mm flat head screws	11
Motor bracket	3	M3 nut	11
Couplings	3	M2 wrench	1
M4*12mm hexagon screws	3	M3 wrench	1
Battery box	1	M4 wrench	1

发货清单:


名称	数量	名称	数量
板子	2	顶丝	6
全向轮子	3	M3*50 铜柱	3
电机	3	M3*12mm 平头螺丝	6
电机线	3	M3*6mm 平头螺丝	11
电机支架	3	M3 螺母	11
联轴器	3	M2 扳手	1
M4*12mm 内六角螺丝	3	M3 扳手	1
电池盒	1	M4 扳手	1

1, Firstly Install the connector into the wheel: After putting a long couplings on one side. Put a short coupling on the another side. And lock them with M4*12mm hexagon screws. 先装联轴器到轮子上，在一边套上长的联轴器后。再在另一边套上短的联轴器。再用 M4*12 内六角螺丝锁上。






2, Install the motor bracket. Use 2pcs M3*12mm flat head screws, and lock it with M3 nut.装电机支架。用 2 颗 M3*12 平头螺丝。然后用 M3 螺母锁上

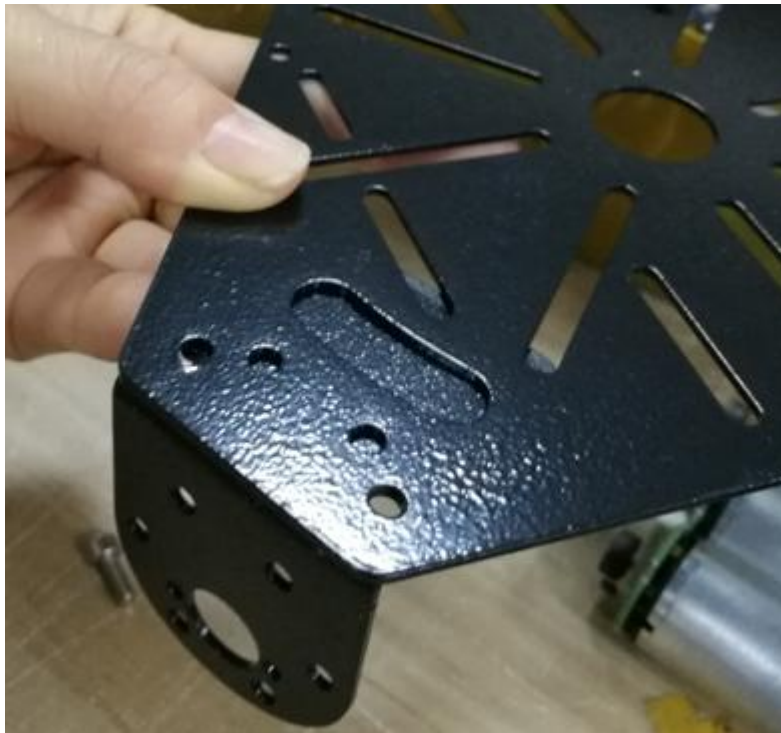



3, Install the motor. Use 2pcs M3*6mm to lock. Note: pls put your stength in this steps.装电机。用 2 颗 M3*6 螺丝锁住。注意，这里要用力点



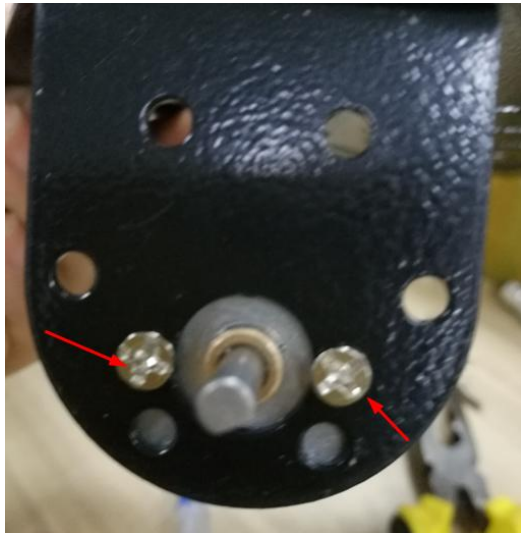

4, Use 2pcs black top silk to lock the coupling on the wheel.将 2 颗黑色顶丝锁到轮子上的联轴器上，



Align the flat end of the shaft of the motor, lock it. 对准电机轴平的一端，拧紧。






5, Install the second plate. Use M3*50mm couplings. And lock it with M3 screws.装第2层，用 M3*50 的铜柱装，用 M3 螺丝锁上





6.Finally use the M3*6mm screws to lock.最后用 M3*6mm 的锁上、

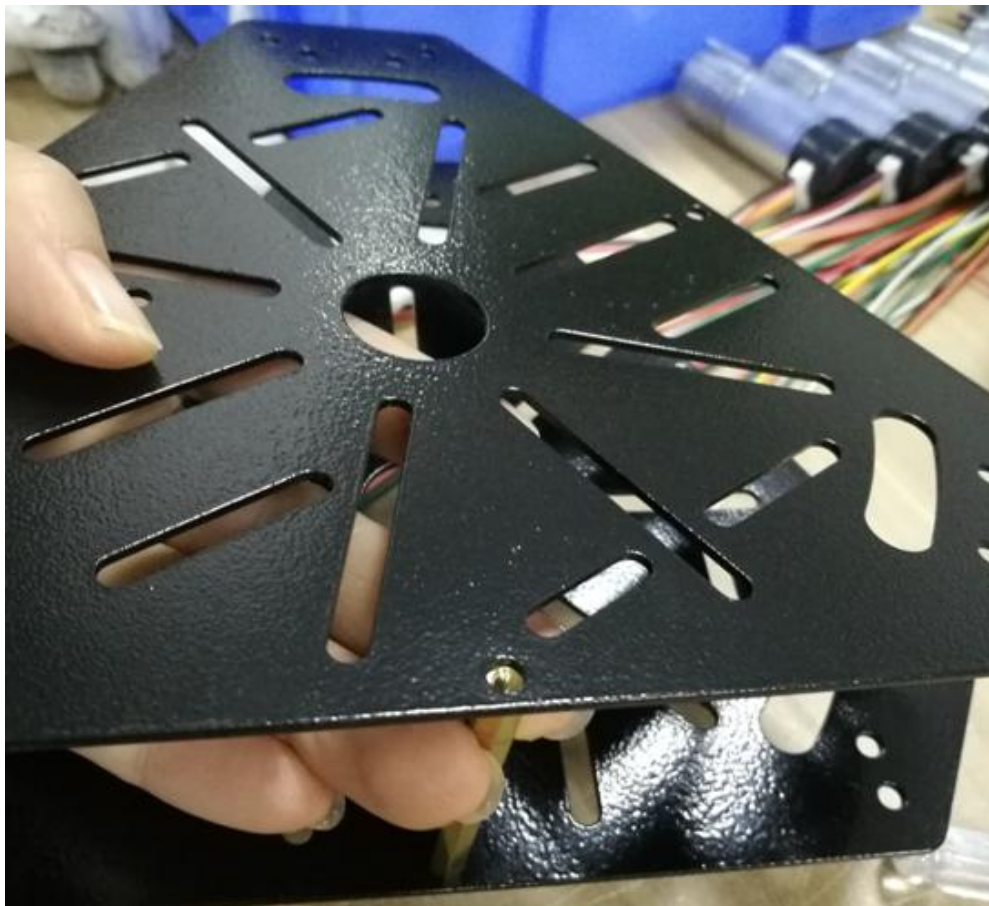

Finish. Congraduation! You have learned to install.完成。恭喜你已经学会安装。