


# XH2004

## Air Circulation Fan

# User Manual

---

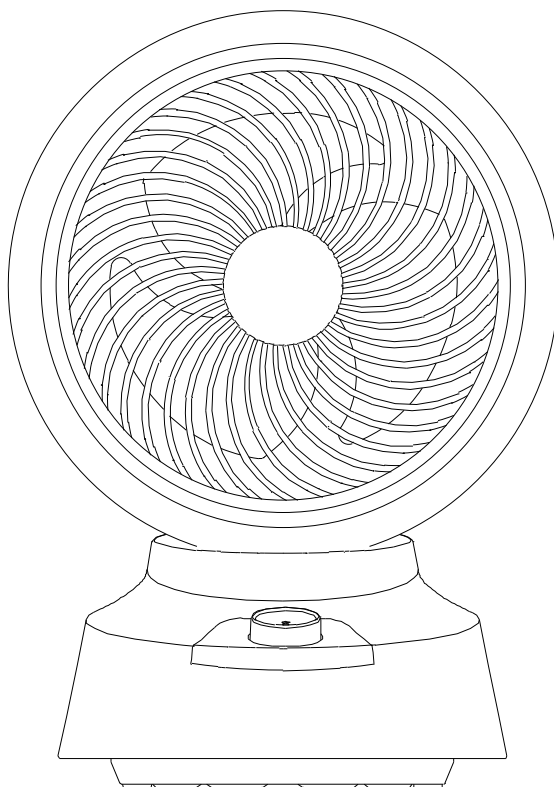

---

### WARRANTY

**After-sales Service Letter of Commitment:**

All products purchased in our company are guaranteed to keep in good repair for 3 months. If quality problems happen in guarantee period, our company will maintain for free or provide replacement. After-sales service isn't restricted by time and hear feedback idea of users and deal with them in time. If you are caught in some problems when using our products, welcome to contact us at any time.



After-sales mailbox: [Skonservice@outlook.com](mailto:Skonservice@outlook.com)

## What's in the Package


9 Inch Air Circulation Fan	1
User Manual	1

## Specification


Model	XH2004
Fan Grille Diameter	9in
Blade Diameter	6in
Voltage	AC 120V
Frequency	60Hz
Power	35W
Power cord	68in
Speed	1 - 2 - 3
Weight	6.16lb
Oscillation Angle	Automatic 60° in Horizontally
	Manual 90° in Vertically

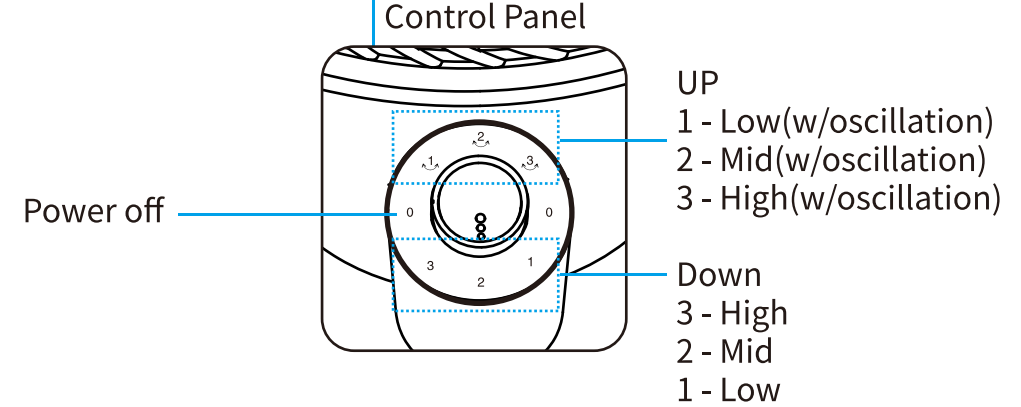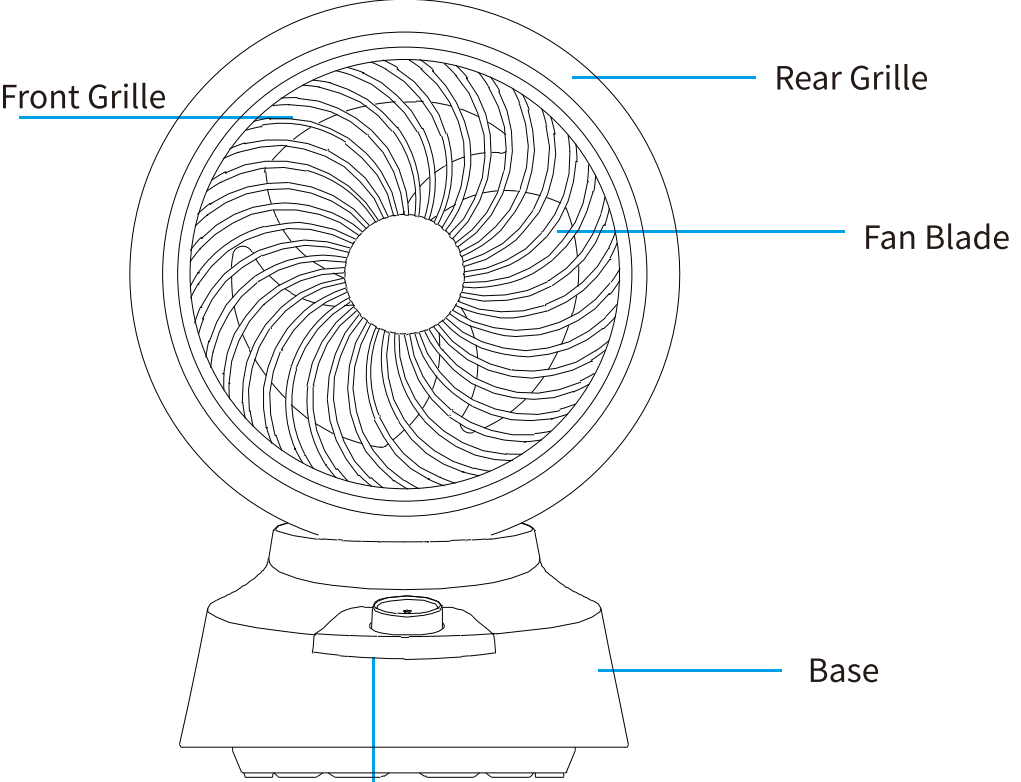

## How to use

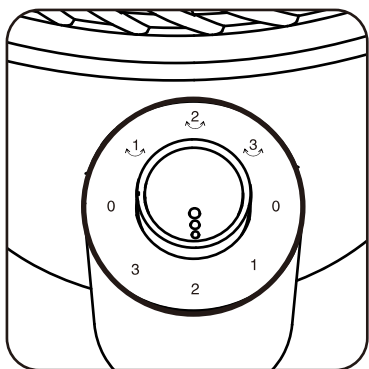

Place this appliance on a level table top and connect it to the power outlet. Turn the “Wind Speed & Oscillation Control Knob” to wanted speed (1/2/3) and this appliance will start operate. When it is not used, please turn the Knob to “0” then unplug the fan. There are 6 speed combination: 1-Low/2-Mid/3-High wind speed & different wind speed with oscillation.

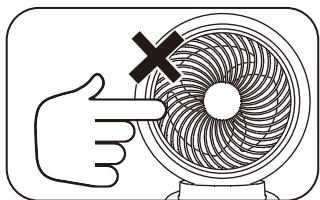


Do not put finger into fan grilles to avoid accident. When operating, keep the children out of reach of it.

## How to clean

**Note:** Please remove the plug from the power outlet before cleaning. Do not immerse the machine directly into water to prevent water from getting into the machine. No corrosive detergent can be used. The main body of the machine can be cleaned with a mildly damp cloth (Neutral detergent may be used), wipe to dry completely after cleaning.

The front grille is detachable to wash after unplugged this appliance:

1. Loose the grille lock screws at the edge of the rear grille with a long screwdriver.
2. Remove the screws and separate the front grille from the main body.
3. Clean and wash the separated front grille.
4. Use vacuum cleaner or dry cloths to clean the main body & motor.
5. Install the front grille by reserving the above steps after all parts are dried completely.

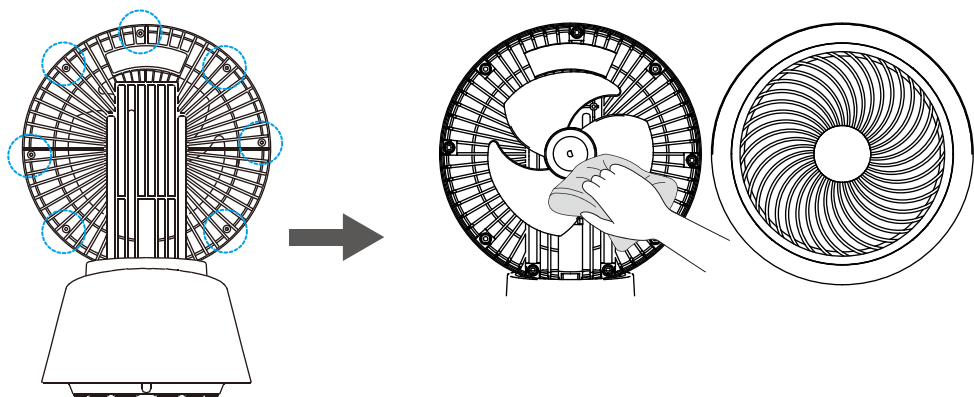

1. Back View -Loose the grille lock screws
2. Disassembled the front grille
3. The back grille and host Cannot be disassembled

## Trouble Shooting

Question	Possible Reason	Suggested Solution
Not working /No power	No power	Check the power supply
	Power core, plug or socket damaged or not connected	Check the status of plug and socket are well connected
	Abnormal voltage	Check if the voltage of power supply too high/low
		Check the power plug and socket
		Check if the socket overload or extend socket damaged

## Attention

01. The surface is extremely hot during operation and before cool down after switched off. Please do not touch.
02. Please stop using the appliance immediately if the power cord has been damage and contact customer support.
03. Do not cover the appliance by clothes or other object when operating to avoid overheat or motor jam.
04. Do not use the power supply with power/voltage not match with this appliance. There is still a hazard of electric shock even if the main power is switched OFF. Please unplug to ensure safety when it is not in use.
05. This appliance is intended to be used in household only. It should not be used in commercial or industrial environment.
06. Please do not operate the power cord and socket to avoid electric shock.
07. Please keep this appliance out of reach of children. Children are not allowed to operate this appliance. Children should be supervised by an adult to ensure that they do not use or play with the appliance to avoid accident.
08. Do not pull the power cord to lift or move the appliance.
09. Stay away from high temperature environment or nearby the stove. Otherwise, it may lead to damage of the appliance.
10. Please store this appliance in a cool, dry place.
11. Do not put this appliance on an inclined plate.
12. The appliance should never be used under conditions where it may be immersed, or the power plug come in contact with water. Otherwise, it may cause electric shock or damage.
13. To remove the plug from the power outlet by pulling the power cord is strictly prohibited. Unplug the fan by grasping the plug and pulling it from the outlet.
14. Please do not unplug the appliance while it is in operation.
15. Do not insert or put anything into the appliance to avoid malfunction. Misuse or operating when malfunction may have potential to cause injury or accident.
16. When cleaning, maintaining and moving the appliance, the power must be disconnected.
17. Do not modify this appliance or in conjunction use with other instruments to avoid dangerous.